## Instructions for Changing the K3S VFO B Knob

E740354 Revision A, October 23, 2019 Copyright © 2019, Elecraft, Inc. All Rights Reserved

Remove the old knob and felt washers. Note the supplied new knob has a slightly smaller diameter then the original knob. The felt washers supplied with the knob are the correct diameter for the new knob.

Before mounting the knob place the felt friction washer over the VFO B shaft. Mount the knob on the VFO B encoder shaft to the right (under the pushbutton switches) as shown in Figure 1. Before tightening the set screws, adjust the position of the knob against the felt washer to produce the desired amount of drag for smooth movement without the knob turning too freely. A second felt washer may be needed to obtain the desired amount of drag.



PLACE ONE FELT
WASHER OVER
THE ENCODER SHAFT
SO THE NUT SHOWS
THROUGH THE
CENTER.



PLACE THE KNOB ON THE SHAFT
SO IT HAS THE DESIRED AMOUNT
OF DRAG AGAINST THE FELT
WASHER AND TIGHTEN BOTH
SET SCREWS WITH A 5/64" (2 mm)<sup>Figure 1</sup>
ALLEN WRENCH.