

ELECRAFT K3s OWNER'S MANUAL ERRATA

Rev. A1-1, May 26, 2015

IMPORTANT NOTES – READ BEFORE OPERATING THE K3S

SAVE CONFIGURATION OFTEN: Whenever you make a configuration change to your **K3s**, such as adding a new option module or changing important menu settings, use the *K3 Utility* application to save the configuration file. This can be used to restore your configuration in the event of data loss or following an EEINIT (initialization).

IF THE SPEAKER IS NOT WORKING with headphones unplugged: Locate the *CONFIG:SPKR+PH* menu entry. Tap '1' on the numeric keypad until you see **PH.R SW-**. The minus sign (-) indicates inverted switch logic for the jack on the KIO3B audio board. Exit the menu and re-save your configuration using *K3 Utility*.

EXTERNAL SPEAKER JACK CAUTION: This jack is stereo. If you use a mono speaker plug, turn off the right channel amplifier by setting the *CONFIG:SPKRS* menu entry to 1. This will eliminate the possibility of damaging the right-channel amplifier. (You will still hear stereo when using headphones.)

MANUAL CORRECTIONS

TBD (in review).