

CMD	Description	CMD	Description	CMD	Description
AB	VFO Copy/Swap/Init	KS	Keyer Speed	SI	System Auto Info
ACM/ACS	Antenna Configuration: RX Antenna Access Mask	KY	CW/DATA Message Text	SM\$	S-Meter
ACT	Antenna Configuration: TX Antenna Access Mask	KZ	Remote Paddle	SMH\$	High Resolution S-Meter
ACN	Antenna Configuration: Antenna Name	LB	LPA Bias Calibration	SN	Serial Number
AF	Audio Feedback Tones	LI	Line Input	SP	Spot & Autospot
AG\$	AF Gain	LK\$	VFO Lock	SS	Screenshot Capture
AI	Auto-Info	LN	VFO Link	SQ\$	Squelch
*AL	AF Limiter	LO	Line Out	SW	K4 Front Panel Switch Emulation
AN	TX Antenna	LOG	Log Diagnostic Data	SWT/SWH	K3 Switch Tap/Hold Emulation
AP\$	APF	MA\$	Mode Alternates	TA	TX Gain constant
AR\$	RX Antenna	MB	Message Bank	TB\$	Buffered Text
AT	ATU Mode	MC	Memory Channel	TD\$	Text Decode/Encode Mode
BG	Bar Graph Read	MD\$	Operating Mode	TE	TX Equalizer
BI	Band Independence for VFO B	MO	Menu Open	TG	TX Gain constant
BL	Balance	ME	Menu Parameter	TM	TX Meter Data
BN\$	Band Number	MEDF	Menu Definition	TQ	TX query
*BR	Serial Port Baud Rate	MG	Mike Gain	TS	TX Test Mode
BW\$	Bandwidth	MI	Mic Input Select	TU	Tune
CC	Remote Client Count	ML	Transmit Monitor Level	TX	Go to Transmit
CP	Speech Compression	MS	Mic Setup	UP/UPB	VFO Move UP
CW	CW Pitch	MX	Main/Sub Audio Mix	UT	UTC Timestamp
DA	Digital Audio Control	NA\$	Auto Notch	VC	Coarse Tune Step
DB\$	Audio fBV meter read	NB\$	Noise Blanker	VG	VOX Gain
DE	Command Processing Delay	NM\$	Manual Notch	VI	VOX Inhibit or antivox
DM	DTMF	NR\$	Noise Reduction, LMS	VO\$	VFO Offset
DN/DNB	VFO Move Down	NRS\$	Noise Reduction, SSNR	VT\$	VFO Tuning Step
DO	DIGOUT1 State	OM	Option Mode	VX	VOX On/Off
DR\$	Data Rate	OV\$	Overflow ADC/COR	WM	Wattmeter Calibration
*DT\$	Data Sub-Mode	PA\$	Preamp	XV\$	Transverter Band Select
DV	Diversity Mode	PB	DVR Message Playback	XVN, XVM, XVR, XVI, XVO, XVP	Transverter Band Setup
DW	TX Data Bandwidth	PC	Power Control	XT	XIT
EC	Echo Command to RS232	PK	Port Keying Setup	MENU	
EE	EE Init	PL\$	PL/CTCSS	MEDF	Menu Definition
ER	Error Reporting	PO	Power Output	ME	Menu Parameter
ES	TX SSB/ESSB Mode Bandwidth	PP	Per-band Power	MO	Menu Open
FA	VFO A Frequency	PS	Power On/Off Control	DISPLAY COMMANDS	
FB	VFO B Frequency	RA\$	RX Attenuator	#AR	Auto-Ref Settings
FC\$	Center Panadapter for target VFO	RC\$	RIT/XIT Offset Clear	#AVG	Averaging
FI\$	IF Center Frequency	*RD\$	RIT/XIT Down	#CAL\$	Panadapter Reference Level Calibration
FP\$	Filter Preset	RE	RX EQ	#CUR\$	VFO Cursor Display Mode
FR	Receive Function	RG\$	RF Gain	#DSM	Display Mode, LCD
FT	Split	RL	Software Release Select	#HDSM	Display Mode, External Monitor
FX	Audio Effects	RO\$	RIT/XIT Offset	#DPM	Dual Panadapter Mode, LCD
GT\$	AGC Mode	RP	Repeater Offset and Mode	#HDPM	Dual Panadapter Mode External Display
HD	HDR Module Mode	RRT	Remote Connection	#FPS	Desired Panadapter Frames Per Second
ID	Radio Identification	RS	Remote Set	#FRZ	Freeze Panadapter and Waterfall
*IF	Basic Radio Information	RT\$	RIT On/Off	#FXA	DDC Fixed Tune Mode
*IN	TX Inhibit Status	*RU\$	RIT/XIT UP	#FXT	DDC Fixed Tune Toggle
*IP	IP address	RV	Firmware Revisions	#MP\$	Mini-Pan Toggle
IS\$	IF Center Pitch	RX	Go to Receive Mode	#NBL\$	DDC Noise Blanker Level
K2/K3	Meta Commands	SB	Sub RX	#NB\$	DDC Noise Blanker Toggle
K4	Meta Command	SC	Screen Count	#PKM	Panadapter Peak Mode
KP	Keyer Paddle and Weight Setup	SD	VOX or QSK Delay	#REF\$	Panadapter Reference Level, LCD
CMD	Description	CMD	Description		

#HREF\$	Panadapter Reference Level, External Monitor	#HREF\$	Panadapter Reference Level, External Monitor
#SFL	Panadapter Scale	Remote Access Commands	
#SPM	Spectrum Fill	CC	Remote Client Count
#SPN	Span Adjust Mode	*EM	Audio Encode Mode
#WBS	Desired Span	KZL	Remote Paddle / Key-Down Initial Delay
#HWBS	Waterfall Color Range LCD	KZF	Remote Paddle /Key Fail-Safe Timeout
#WFC\$	Waterfall Color Range, External Monitor	KZ	Remote Paddle / Key Data Stream
#HWFC	LCD Waterfall Color Mode	RRT	Remote Connection Request
#WFH	Waterfall Color Mode, External Monitor	RRC	Allowed Remote Connections
#HWFC	Waterfall Height, LCD	RRO	Remote Connection Dialog
#VFA	Waterfall Height, External Monitor	RRP	Remote Connection Password
#VFB	VFO A Cursor Display Mode	RS	Remote Set
	VFO B Cursor Display Mode		