

Description	CMD	Description	CMD	Description	CDM
AF Gain	AG\$	Waterfall Height, External Monitor	#HWFC	IF Center Pitch	IS\$
*AF Limiter	AL	Data Rate	DR\$	IP address	IP
AGC Mode	GT\$	*Data Sub-Mode	DT\$	K3 Switch Tap/Hold Emulation	SWT/SWH
Allowed Remote Connections	RRC	DDC Fixed Tune Mode	#FXA	Keyer Paddle and Weight Setup	KP
Antenna Configuration: Antenna Name	ACN	DDC Fixed Tune Toggle	#FXT	Keyer Speed	KS
Antenna Configuration: RX Antenna Access Mask	ACM/ACS	DDC Noise Blanker Level	#NBL\$	LCD Waterfall Color Mode	#WFC\$
Antenna Configuration: TX Antenna Access Mask	ACT	DDC Noise Blanker Toggle	#NB\$	Line Input	LI
APF	AP\$	Desired Panadapter Frequency, Per Second	#FPS	Line Out	LO
ATU Mode	AT	Desired Span	#SPN	Log Diagnostic Data	LOG
Audio Effects	FX	Digital Audio Control	DA	LPA Bias Calibration	LB
Audiio Encode Mode	*EM	DIGOUT1 State	DO	Main/Sub Audio Mix	MX
Audio fBV meter read	DB\$	Display Mode, External Monitor	#HDSM	Manual Notch	NM\$
Audio Feedback Tones	AF	Display Mode, LCD	#DSM	Memory Channel	MC
Auto Notch	NA\$	Diversity Mode	DV	Menu Definition	MEDF
Auto-Info	AI	DTMF	DM	Menu Definition	MEDF
Auto-Ref Settings	#AR	Dual Panadapter Mode External Display	#HDPM	Menu Open	MO
Averaging	#AVG	Dual Panadapter Mode, LCD	#DPM	Menu Open	MO
Balance	BL	DVR Message Playback	PB	Menu Paramater	ME
Band Independence for VFO B	BI	Echo Command to RS232	EC	Menu Parameter	ME
Band Number	BN\$	EE Init	EE	Message Bank	MB
Bandwidth	BW\$	Filter Preset	FP\$	Meta Commands	K2/K3
Bar Graph Read	BG	Firmware Revsions	RV	Mic Input Select	MI
*Basic Radio Information	IF	Freeze Panadapter and Waterfall	#FRZ	Mic Setup	MS
Buffered Text	TB\$	Go to Receive Mode	RX	Mike Gain	MG
Command Processing Delay	DE	Go to Transmit	TX	Mini-Pan Toggle	#MP\$
Configuration Error	ER	High Resolution S-	SMH\$	Mode Alternates	MA\$

CW Pitch	CW	IF Center Frequency	FI\$	Mini-Pan Toggle	#MP\$
CW/DATA Message Text	KY	*IP Address	IP	Tune	TU
Mode Alternates	MA\$	Remote Paddle / Key-Down Initial Delay	KZL	TX Antenna	AN
Noise Blanker	NB\$	Remote Paddle /Key-Fail-Safe Timeout	KZF	TX Data Bandwidth	DW
Noise Reduction	NR\$	Remote Set	RS	*TX Inhibit Status	IN
Operating Mode	MD\$	Remote Streaming Audio Latency	SL	TX Meter Data	TM
Option Mode	OM	Repeater Offset and Mode	RP	TX query	TQ
Overflow ADC/COR	OV\$	*RIT/XIT Down	RD\$	TX SSB/ESSB Mode Bandwidth	ES
Panadapter Peak Mode	#PKM	RIT On/Off	RT\$	TX Test Mode	TS
Panadapter Reference Level	#CAL\$	RIT/XIT Offset	RO\$	UTC Timestamp	UT
Panadapter Reference Level, External Monitor	#HREF\$	*RIT/XIT UP	RU\$	VFO A Cursor Display Mode	#VFA
Panadapter Reference Level, LCD	#REF\$	RX Antenna	AR\$	VFO A Frequency	FA
Panadapter Scale	#SCL	RX Attenuator	RA\$	VFO B Cursor Display Mode	#VFB
Per-band Power	PP	Screen Count	SC	VFO B Frequency	FB
PL/CTCSS	PL\$	Screenshot Capture	SS	VFO Copy/Swap/Init	AB
Port Keying Setup	PK	Serial Number	SN	VFO Course Tuning	VC\$
Power Control	PC	*Serial Port Baud Rate	BR	VFO Cursor Display Mode	#CUR\$
Power On/Off Control	PS	S-Meter	SM\$	VFO Link	LN
Power Output	PO	Span Adjust Mode	#SPM	VFO Lock	LK\$
Preamp	PA\$	Spectrum Fill	#SFL	VFO Move Down	DN/DNB
Radio Identification	ID	Speech Compression	CP	VFO Move Up	UP/UPB
Receive Function	FR	Split	FT	VFO Offset	VO\$
Remote Client Count	CC	Spot & Autospot	SP	VFO Tuning Step	VT\$
Remote Client Count	CC	Squelch	SQ\$	VOX Gain	VG
Remote Connection	RRT	Sub RX	SB	VOX Inhibit	VI
Remote Connection Password	RRP	System Auto Info	SI	VOX On/Off	VX
Remote Connection Request	RRT	Text Decode/Encode Mode	TD\$	VOX or QSK Delay	SD

Remote Paddle	KZ	Transmit Monitor Level	ML	Waterfall Color Mode, External	#HWFC
Remote Paddle / Key Data Stream	KZ	Transverter Band Select	XV\$		
Waterfall Color Range LCD	#WBS	Transverter Band Setup	XVN, XVM, XVR, XVI, XVO, XVP		

