

ELECRAFT KX1 QUICK REFERENCE

BAND/SPEED

Tap once to show band, twice (quickly) to change bands. Hold to set keyer speed with VFO knob

TUNE (key-down) :


Hold MENU + BAND; tap any switch after power is displayed

DISP (display mode):

Hold BAND + RIT; norm, Smtr, battery

RX MODE (sideband):

Hold MENU + RIT; norm, LSB, USB

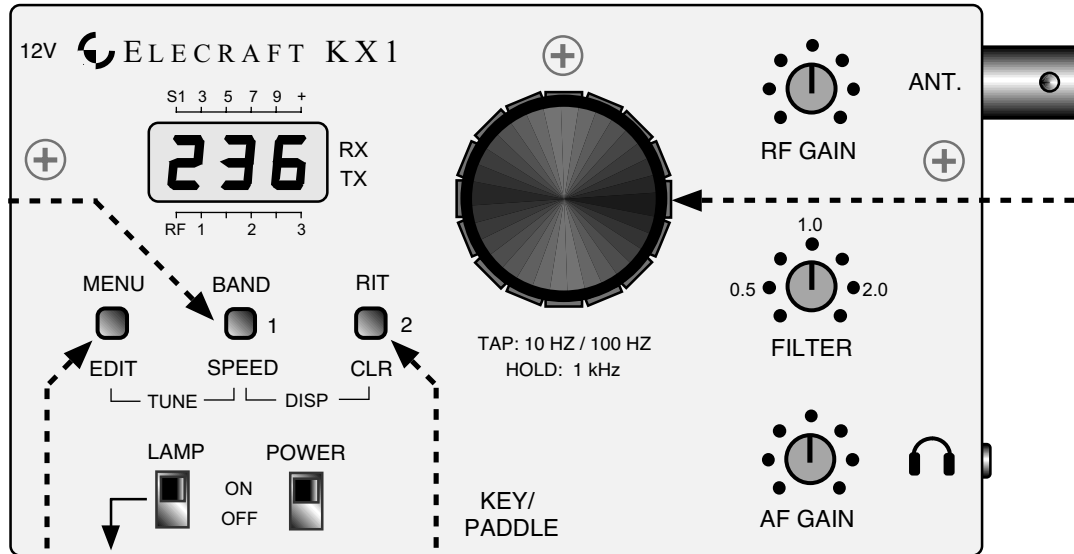

RIT/CLR Tap for RIT on/off, hold for RIT clear

VFO KNOB FUNCTIONS

TUNING RATE:

Tap for 10/100 Hz, hold for 1 kHz (5 kHz in LSB/USB receive modes)

LOCK/UNLOCK:

RIT + VFO knob

HIGH-PRIORITY MEM:

BAND + VFO knob

SWITCH CW:

MENU + VFO knob

MENU/EDIT Tap to enter menu, hold to edit (except RCL and PLY); use VFO knob to scroll menu or modify parameters

LED	LED LEVEL (tap BAND or RIT); LED TIMEOUT, use VFO knob	IAB	IAMBIC MODE, A or B	BAT	BATTERY WARNING THRESHOLD
STL	SIDETONE VOLUME LEVEL, 0-3	CFB	AUDIBLE CW FEEDBACK, OFF or 10-40 WPM in 5 WPM steps	ATU	AUTO-TUNER MODE (see ATU manual)
STP	SIDETONE PITCH, 500-700 Hz	SLO	S-METER ZERO SET	RCL	MEMORY RECALL (tap 1, 2, or VFO); STORE (EDIT, tap 1, 2, or VFO; hold rather than tap = high priority)
T-R	QSK DELAY, 0-900 ms	SHI	S-METER SCALE	PLY	MESSAGE PLAY (tap 1 or 2; tap VFO knob for CW test mode, P=0); RECORD (EDIT, tap 1 or 2)
RPT	AUTOREPEAT DELAY, 0-255 sec	B30	30-M BAND on/off		
INP	KEYING DEVICE: Hnd, PDn, PDr	CAL	VFO CALIBRATION (see manual)		