

ELECRAFT KH1

HAND-HELD, 5-BAND CW TRANSCEIVER

OWNER'S MANUAL

Rev. B7 January 31, 2026



TABLE OF CONTENTS

INTRODUCTION	4
GENERAL PRECAUTIONS	5
POWER SOURCE	5
EXTERNAL SUPPLY	5
CHARGE STATUS LED	5
INTERNAL BATTERY	6
PRESERVING CLOCK TIME DURING CHARGING	7
UTILITY MOUNTING POINTS	7
LOG TRAY AND PEN	8
ANTENNAS	9
BUILT-IN ATU AND WHIP MATCHING NETWORK	9
TIPS FOR USING COMPACT ANTENNAS	10
KHRA1 RIGHT-ANGLE WHIP ADAPTER	11
GROUND CONNECTION AND COUNTERPOISE WIRE	12
SPARE GROUND NUT	12
CARRYING CASE	13
KEY/DATA JACK	13
DATA CONNECTION	14
HEADPHONES AND SPEAKERS	14
DISPLAY	14
KH1 FRONT PANEL REFERENCE	15
BASIC OPERATION	16
TURNING THE KH1 ON/OFF	16
SWITCH TAP AND HOLD FUNCTIONS	16
VFO KNOB FUNCTIONS	16
AF/MON KNOB FUNCTIONS	16
DISPLAY MAPPING TO SWITCHES 1-4	17
RECEIVER CONTROLS	17
PFn AND TRANSMITTER CONTROLS	17
BAND AND MODE CONTROLS	17
KEYER SPEED CONTROLS	18
ATU TUNING	18
MESSAGE PLAY / RECORD CONTROLS	18
USING THE MENU	19
AUDIO CW USER INTERFACE	19
ADVANCED FEATURES	20
KEYING WEIGHT AND QSK DELAY	20
SCAN/MINI-PAN	20
POWER-ON BANNER	20
USER-PROGRAMMABLE FUNCTIONS	21
REAL-TIME CLOCK	21
CUSTOMIZING POWER LEVELS	21
TEXT DECODE AND DISPLAY	22
CW/SSB CROSS-MODE OPERATION	22
GENERAL COVERAGE RECEIVE	22

MANUALLY TUNING THE ATU	23
AMPERE-HOUR METERING	23
BUILT-IN LOGGING	23
ENTERING TEXT NOTES USING CW	23
INITIALIZING PARAMETERS (EEINIT)	23
UPDATING FIRMWARE	24
FORCED DOWNLOAD	24
CONFIGURATION LOAD/SAVE	24
REMOTE CONTROL	24
COMPUTER INTERFACE	24
FT8 OPERATION.....	25
FT8 TRANSMIT FOR SOTA SELF-ID.....	25
TWO-WAY FT8 CONTACTS	25
CONFIGURATION.....	26
ALIGNMENT	26
RECEIVER.....	26
TRANSMITTER	26
MENU FUNCTIONS	27
TROUBLESHOOTING	35
GENERAL	35
TRANSMIT	36
RECEIVE	36
ERROR MESSAGES	37
THEORY OF OPERATION	39
SPECIFICATIONS	41
GENERAL	41
RECEIVER.....	41
TRANSMITTER	41
CUSTOMER SERVICE AND SUPPORT.....	42
REPAIR / ALIGNMENT SERVICE	42

INTRODUCTION

The Elecraft KH1 is a pocket-sized, 40/30/20/17/15 meter, low-power CW transceiver optimized for hand-held as well as table-top operation. FT8 operation is also supported (pg. 25). The transceiver itself weighs only 6 oz. (0.17 kg); with battery and all options installed, total weight is 13 oz. (0.36 kg). This allows it to be operated HT-style indefinitely without causing arm or wrist fatigue. It's also an ideal backup rig, requiring little packing space. The KH1's unique form-factor provides multiple advantages for field operation:

USER INTERFACE Both the knobs and optional keyer paddle (KHPD1) are at the lower end of the transceiver. This works well whether you're sitting or standing. The four pushbutton switches are close by, aligned with LCD text fields. An audio CW interface is also available to aid blind operators (pg. 19).

FIELD LOGGING The KHLOG1 fold-out log tray solves one of the most vexing problems with SOTA, HF Pack, and general field operation: how to conveniently log contacts, in any situation. The tray can be installed on either side of the radio, facilitating left- or right-handed use, and protects the front panel when closed. Filled log sheets can be moved to the bottom of the stack with one hand..

BUILT-IN WHIP The KHATU1 antenna tuner comes with a modified top panel that embodies a whip mounting screw, loading coil, and band-selection switch for use on 20/17/15 meters (and on 30 meters with reduced efficiency). The supplied telescoping whip clips to the side of the rig when not in use. The ATU matches a wide range of loads, and works with the BNC jack as well as the whip.

The KH1 covers the full frequency range of each ham band, with power output of 5 watts. Many hours of field operation are ensured by an internal 2.6 AH, 11 V Li-ion battery (KXBT2). An internal charger (KHIBC1) keeps the battery topped off, ready to go when you are. The KH1 has many other features, including:

- FT8 transmit capability for SOTA self-ID or two-way contacts (See FT8 OPERATION, pg. 25)
- small speaker
- optional right-angle adapter for the whip (model #KHRA1)
- real-time clock (RTC), including both time and date
- SWL band: 6.7 - 22.0 MHz (uses SSB mode to copy AM); ATU can be manually tuned to peak signals
- CW text decode/display, plus 50 K of EEPROM for logging TX text and CW-entered field notes
- VFO locking; RIT and XIT
- SSB/CW cross-mode operation
- Easy-to-use scan/mini-pan function for signal hunting
- firmware upgrades via supplied USB cable and *KH1 Utility* application
- full remote control for specialized applications
- custom, zippered carrying case (ES20) with utility pockets (pg. 13)

We hope the KH1 becomes your go-to rig for ultralight adventure travel – whether to exotic locales, to the urban/wilderness boundary, or just to your own back yard.

Wayne, N6KR
Eric, WA6HHQ

GENERAL PRECAUTIONS

- **DO NOT PLUG A KXUSB CABLE INTO THE HEADPHONE JACK.** The KXUSB cable (used for firmware updates) must be plugged only into the KEY/DATA jack. See 24 for firmware update instructions.
- **Do not touch the telescoping whip when transmitting, as you could receive an RF burn. Set the whip's band switch to the center-off position when using the BNC jack.** (A telescoping whip and internal matching components are supplied with KHATU1 option.)
- **Avoid prolonged exposure to moisture.** The KH1 can be used in light precipitation, but it is not waterproof. If the log tray is installed, it can be folded over the front panel for moisture resistance.

POWER SOURCE

EXTERNAL SUPPLY

An 8-15 V low-noise power supply, solar panel, or battery can be connected to the external supply jack on the left side. The center pin is (+), as is the white-striped wire on the supplied power cable. The plug can be a Switchcraft model S760 or similar (2.1 mm pin aperture, 5.5 mm barrel diameter).

i Power output varies with supply voltage. On all bands, maximum power output when running from 11 V is typically 5 watts into a 50 ohm load. (See *MENU:ADJ PWR.*)

i The internal and external DC jacks are identical, and are diode-isolated from each other. The jack with the higher voltage will power the transceiver. For example, if you have an internal battery pack plugged in that measures 10.5 V, and an external supply also plugged in that measures 12 V, the external source will supply power. (To display supply voltage and current, see *MENU:DISP MODE*. A more accurate display of internal battery voltage, along with an amp-hours meter, is also available. See *MENU:VBAT*.)

CHARGE STATUS LED

A small LED near the power switch provides power-on and charge status indications, as follows.

With a standard KHDC1 DC input module installed (no charger module):

- LED is **GREEN** when the KH1 is ON; **UNLIT** when it is OFF. (Regardless of which DC jack is in use.)

With a KHIBC1 internal battery charger installed:

- With no external supply connected: the LED is **GREEN** when the KH1 is ON; **UNLIT** when it is OFF.
- With an external operating/charging supply connected: the LED is **RED** when the radio is OFF and charging; **ORANGE** when the radio is ON and charging; **GREEN** when charge is complete and the radio is ON; **UNLIT** when charge is complete and the radio is OFF.

⚠ See important cautions on next page regarding charging the battery internally or externally.

INTERNAL BATTERY


The KH1 is designed to use an Elecraft KXBT2 lithium-ion battery pack. This pack is rated at 11 V, 2.6 Ah. Thanks to the KH1's low receive-mode current drain (~50 to 80 mA), the KXBT2 can provide full power output (5 watts) for 4 to 12 hours of typical QRP operation, and up to 50 hours receive-only.

The battery pack can be internally recharged at a C/10 rate (~250 mA) using a KHIBC1 internal charger. In this case, charging voltage (nominally ~14 V, minimum 12 V) is provided by the same supply that operates the radio. A KXBC2 external fast-charger can also be used (see cautions below.)

⚠ CAUTION: IF A KHIBC1 INTERNAL BATTERY CHARGER IS INSTALLED, DO NOT USE ANY BATTERY PACK OTHER THAN THE KXBT2, which has built-in protection circuitry. The use of an incompatible battery pack may be unsafe and may void the warranty.

⚠ CAUTION: THE BATTERY PACK MUST BE REMOVED FOR RECHARGING WHEN USING A KXBC2 FAST CHARGER. Fast chargers generate RFI, and are NOT suitable for internal charging or for radio operation.

Follow the steps below to install or remove the battery pack.

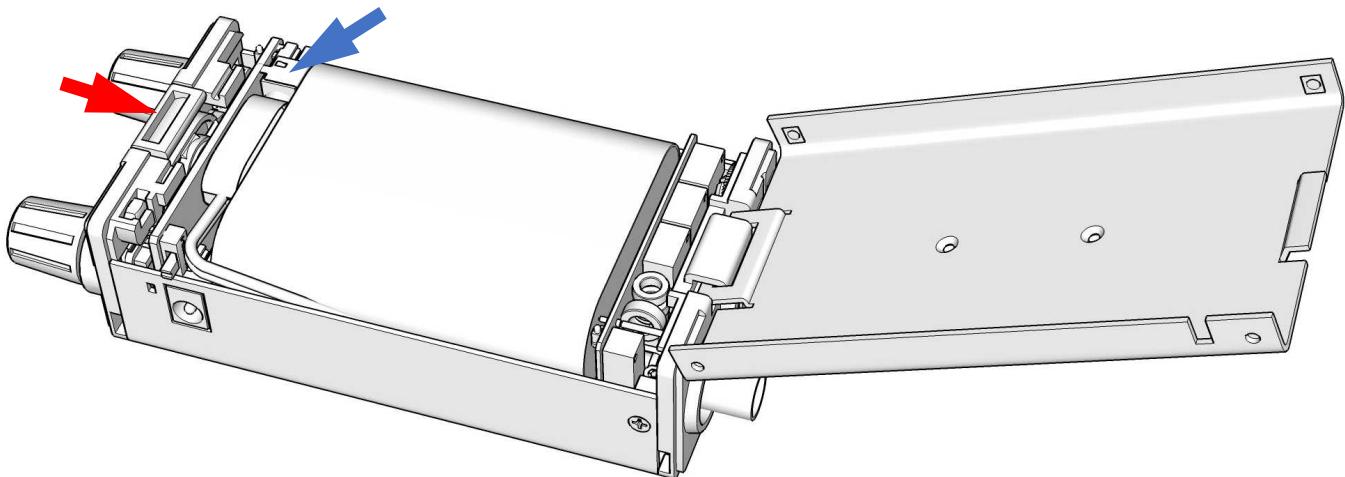

⚠ The aluminum back cover has a tab that forms a hinge with the plastic top panel. Once the back cover has been rotated to a perpendicular position, slide its metal tab backward about 1/8" (3 mm) before continuing rotation. This will make it easier to close the back cover.

- Before installing or removing the battery, turn the KH1 OFF using the small slide switch near the external supply jack. The OFF setting is AWAY from the jack.
- Release the KH1's back panel using the sliding thumb latch near the knobs (**red arrow**). Then lift open the back cover, sliding it backward while rotating the metal tab through the hinge.
- Plug the battery pack into the internal DC jack. **Make sure the plug is inserted up to its shoulder.**
- Place the battery into position, then dress the excess wire to the side approximately as shown.
- Slide the thumb latch out of the way of the back panel's tab, then secure the panel.

⚠ When unplugging the battery, always use the plastic pull tab. Also press lightly where shown by the blue arrow to ensure that the internal charger or DC input module does not come unplugged due to excessive plug extraction force.

- The back cover can be completely removed if desired via a thin slot at the back of the plastic hinge.
- The KH1 includes an amp-hour metering function that allows you to better estimate remaining battery life. See pg. 23.


PRESERVING CLOCK TIME DURING CHARGING

The KH1 includes a real-time clock (RTC), useful for logging (see *MENU:LOGGING*). RTC circuitry is powered by the battery or power supply (internal or external).

When no power supply or battery is connected, the RTC's time registers are preserved for about 1 minute by a large-value capacitor. This allows sufficient time to swap batteries without losing the time setting.

UTILITY MOUNTING POINTS

To enhance versatility, the KH1 provides several utility mounting holes that could be used for future Elecraft accessories or for user-supplied hardware. These are located in three places (see arrows below).

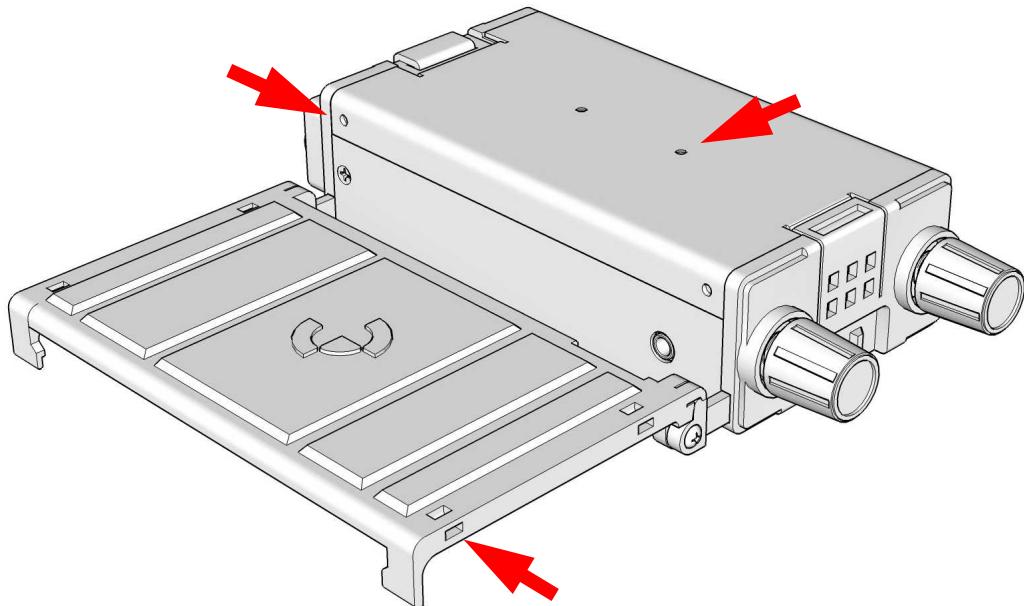


BACK COVER, MIDDLE: There are two **#2 flat head** screw holes in the middle of the back cover. The screw heads must go on the **inside**, and must be flat head to clear the Li-ion battery pack.

BACK COVER, SIDES: There are two **#2** holes on each side of the back cover. These are intended for use with the whip mounting clips that are supplied with the KHATU1 option, though they could be used as attachment points for other hardware. **Pan head screws** must be used in these locations, with the heads on the **inside**. Any other hardware on the inside (such as a nut or washer) would interfere with circuitry.

LOG TRAY: The KHLOG1 log tray (discussed in the next section) has holes at each corner. Some operators may wish to use one of these as an anchor point for a pen lanyard, guarding against loss of the pen when dropped. (A lanyard should not be needed with the supplied mini ball-point pen, however, as it clips securely to the log tray.)

LOG TRAY AND PEN

The KHLOG1 log tray option makes it easy to log contacts while standing, walking, sitting on a trail or rock, or in other situations where there's no convenient writing surface. Such situations occur often during field use. Sometimes sitting is impossible due to insects, mud, thorns, or other impediments.

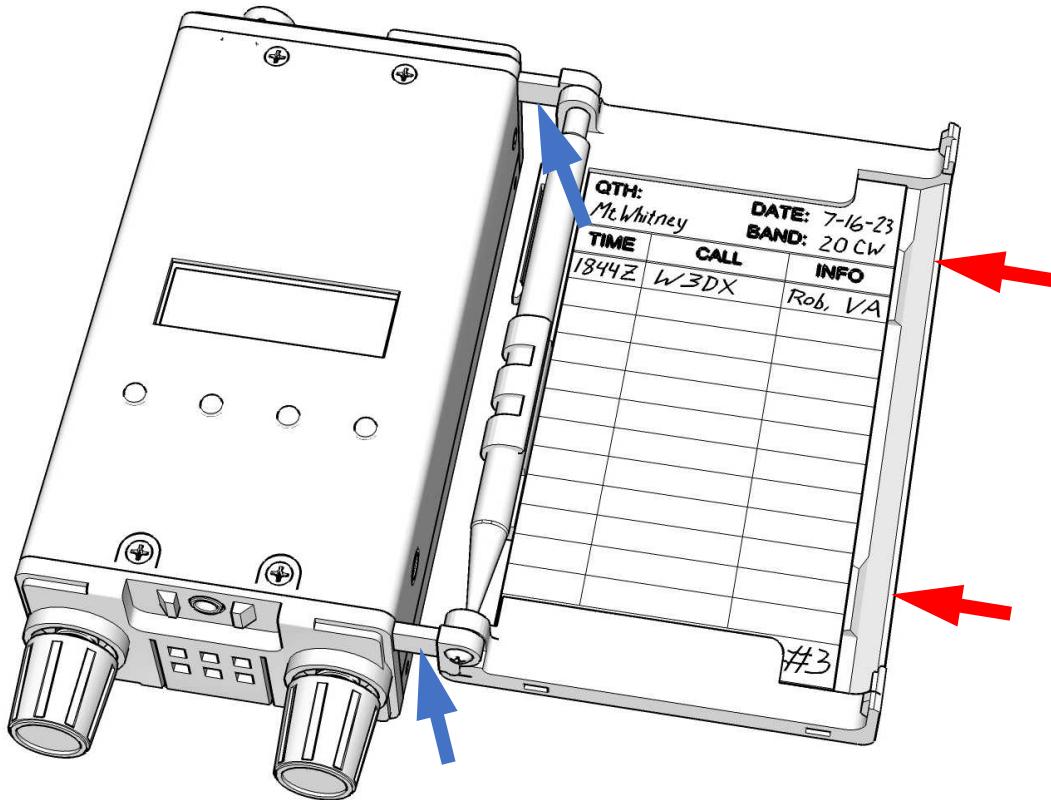

To use the log tray:

- To open the tray, press with a thumb at the locations indicated by the **red arrows** above, then fold the tray open. The rails also slide out to provide additional clearance for your fingers when operating the KH1 hand-held. Detent locking keeps the tray open, even when upside-down.
- The tray can be moved to the either side of the radio. To remove it, push upward on the rails as shown by the **blue arrows** above, lifting as you pull the rails out. To reinstall, squeeze the forked ends as you insert them into the provided slots.
- Print out and precisely trim the desired number of log pages from the file KH1LOGSHEETS.PDF, available on our KH1 web page. We recommend keeping 8 to 10 sheets in the tray, as this stack thickness will provide a moderate friction fit within the upper and lower paper guides.
- Unclip the supplied mini ball-point pen to log contacts, record field observations, etc. **Note:** If you use a *Space Pen* instead, remove its metal pocket clip and/or cap to allow it to fit.
- To change log sheets, slide one sheet off the top, then insert it under the stack, starting with one corner. Indentations are provided for this purpose at the locations near the **red arrows**. With practice you'll find this can be done with one hand.
- When operating at night, fold the log tray halfway up to let the LCD backlight illuminate the log.

ANTENNAS

The basic KH1 has a BNC jack intended for use with a 50 ohm load, e.g. a resonant dipole, vertical, or end-fed half-wave. Further information on antennas can be found in the *ARRL Antenna Handbook* and other sources.


- Since a basic KH1 does not include the whip, hole plugs are installed at the mounting post and switch.

BUILT-IN ATU AND WHIP MATCHING NETWORK

The ATU option (KHATU1) greatly enhances the KH1's versatility. It includes:

- an automatic antenna tuner unit (ATU) that works with both the BNC jack and whip
- internal whip-matching network for use on 20/17/15 meters (30 m at higher SWR / lower power)
- telescoping whip, plus two clips that retain the whip on the side of the KH1 when not in use
- 13' counterpoise wire suitable for 30-15 m use (with the ATU)

- Like the log tray, the plastic whip clips can be installed on either side of the transceiver, facilitating left- or right-handed operation. Refer to instructions on our KH1 manuals web page.

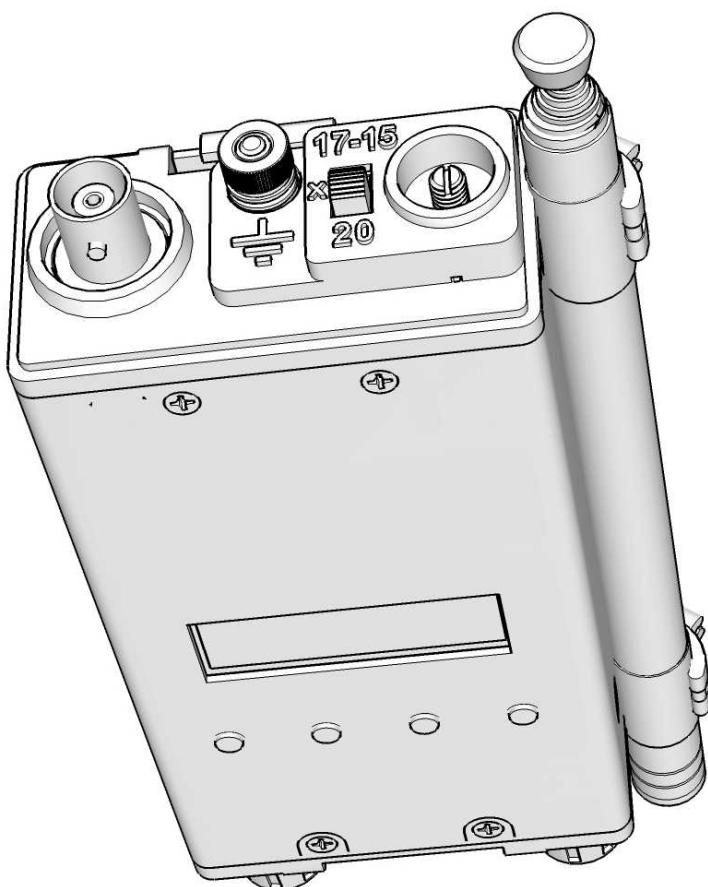

To use the BNC jack:

- Set the whip band switch to the center-off position ("x") to remove RF from the whip mounting post.
- The ATU may provide a better SWR, as well as allowing operation on multiple bands. See pg. 18.

To use the built-in whip:

- Unclip the whip from the radio.
- Screw it to the mounting post.
- Set the slide switch to the 20 m or 17/15 m position. **(This does not disconnect the BNC jack from the ATU. It is always connected.)**
- Match the whip using the ATU.**
- Operation on 30 m is possible in the 20 m switch position. SWR may be high and power output reduced.
- Attach the supplied counterpoise wire to the ground screw, and deploy the wire (on the ground, across bushes, etc.).
- Refer to operating tips on next page.

⚠ It is normal for the whip mounting post to have some “play” when a whip is not connected. The post is pinned internally so that it cannot rotate or be extracted. When a whip is attached, it will be very rigid and stable.

TIPS FOR USING COMPACT ANTENNAS

The built-in whip can be deployed in seconds and takes very little storage space. It allows your entire KH1 multi-band station to disappear into a small pocket. However, a whip will not be as efficient as a longer antenna mounted well above ground.

Rising to this challenge is half the fun...and the tips below can improve your QSO rate. It's possible to make long-range DX contacts using low power and a whip, especially with advantageous propagation. Contacts of 1,000 to 2,000 miles are quite common.

To enhance communications effectiveness when using a whip:

- **ALWAYS use a counterpoise wire.** Without one, your transmitted signal strength will be as much as 20 to 30 dB lower at receiving stations, even if you get an apparent good match using the ATU.
- **Bring extra wire for outings when band conditions are rough.** If there are trees available, a random-wire antenna can be quickly deployed, then matched using the ATU. A BNC-to-binding post adapter (e.g. Elecraft #BNC-BP) can be used to attach an antenna wire to the BNC jack.
- **Choose locations with an upward slope behind you.** This can work as a reflector.
- **Arrange your ground counterpoise wire for greatest benefit.** Deploying the wire toward the favored direction often improves signal strength by several dB, as can draping the wire on top of foliage. You can use the ATU to compensate for changes in wire position and terrain.
- **Use the Reverse Beacon Network (RBN).** This is a global network of receiving stations that may detect your signal and report it on their website. It's a great tool for optimizing antennas.
- **Try working strong stations first (S7 or higher).** While some stations may be strong due to amplification, more often it's because of favorable propagation. Also, they typically use low-loss antennas with gain, making them louder — while allowing them to hear you better as well.
- **Drop in on the QRP “watering holes.”** There are QRP calling frequencies, such as 14060.0 kHz, that are used for weak-signal CW work. “HF Pack” operators will often monitor or call on 18157.5 kHz and other standard HF pack frequencies in both SSB or CW modes. Another active group that listens for weak signals is the *County Hunters Net*, around 14055 kHz.
- **Plan outings around times when band activity is high,** including weekday evenings, weekends, and whenever contests are in progress. Contest examples: CQ DX, ARRL CW, and other “majors”; ARRL Field Day, Winter Field Day (WFD) and other contests emphasizing QRP/field operation; and CWT (very active weekday CW operating events put on by the CWops organization).
- **Try SOTA (Summits On The Air) and POTA (Parks On The Air) operation.** These activities are very popular. SOTA in particular uses a limited frequency range and in most cases low power. “Chasers” (SOTA) or “hunters” (POTA) will be looking for you, and your outings can be pre-announced using self-spotting tools like RBNhole. Our model KHRA1 right-angle adapter is ideal for POTA/table-top operation. See KHRA1, below.

KHRA1 RIGHT-ANGLE WHIP ADAPTER

Quick-deployment table-top operation of the KH1 and its whip is facilitated by our model **KHRA1** right-angle whip adapter. The adapter includes a built-in “bipod.” As shown in the images below, its two legs fold up for transport, or outward to stabilize the rig and antenna in a breeze. *Whip is shown collapsed.*

Note that this adapter is not applicable the BNC-connected antennas – only to the whip. (Another alternative for table-top operation is the Elecraft AX3 six-band whip, which includes a built-in tripod.)





GROUND CONNECTION AND COUNTERPOISE WIRE

A counterpoise wire can be secured to the KH1 using the ground screw beside the BNC jack. The wire can be wrapped around the KH1 and left attached to the ground screw to enable quick deployment.

The KHATU1 option is supplied with a 13' counterpoise wire suitable for use on 20-15 meters. The ATU can be used to achieve resonance and compensate for varying wire lengths, heights, and terrain.

The ATU option also comes with two plastic “whip clips” that double as attachment points for the free ends of antenna or ground wire, as well as headphone cables. The arrow in the illustration below-left highlights the serrated gap on one of the whip clips. A wire or thin cable inserted into this gap will be securely retained during transport.

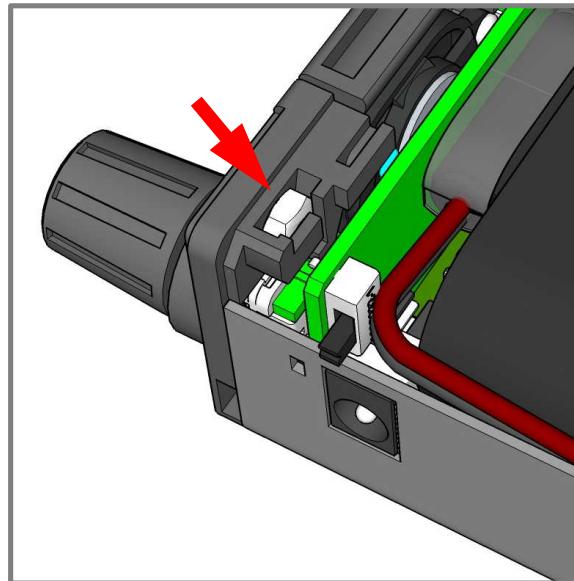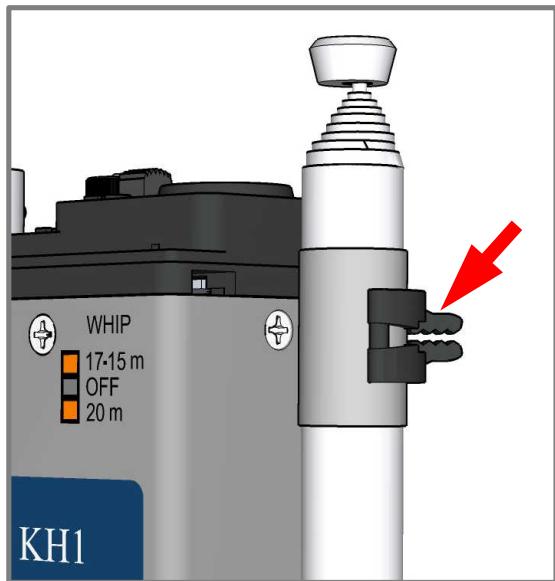


SPARE GROUND NUT

If the regular ground thumb nut becomes lost, the supplied spare ground nut can be used. This 4-40 hex nut is stored inside the enclosure near the on-off switch, as shown by the arrow in the illustration at above-right. This nut can be pried upward out of its retaining clip using any small tool, including the paddle hex wrench, which is stored nearby (see KEY/DATA JACK, pg. 13).

⚠ Turn the KH1 OFF when removing the spare ground nut or hex wrench.

CARRYING CASE

The ES20 custom carrying case is shown below (actual color is black). It provides safe storage for the KH1, headphones, spare battery packs, antenna wire, whip, and other small accessories. The ES20's numerous straps, two D rings, and carabiner add attachment versatility. For example, it can be worn on a belt, vertically. With one hand, the zippered main pocket can then be opened and the radio extracted.



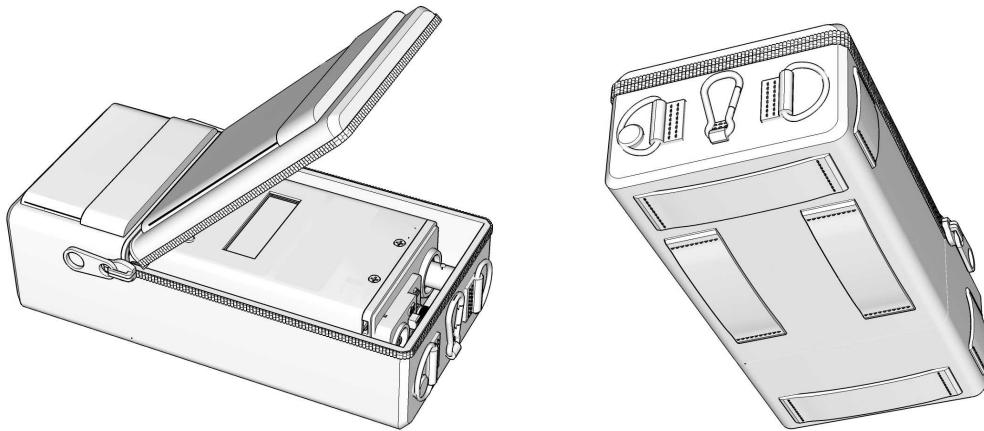


KEY/DATA JACK

A keying device fitted with a 3.5 mm (1/8") **stereo** plug can be plugged into the KEY/DATA jack. This jack doubles as serial port for firmware updates, remote control, and FT8 operation (see next page).

The optional KHPD1 keyer paddle is designed specifically for hand-held operation. It plugs directly into the KEY/DATA jack in the orientations shown below. At left, the KHPD1 is shown in its stored position. At center, the paddle is shown deployed, out of the way of the AF GAIN and VFO knobs.

⚠ Be sure to insert the paddle's plug all the way, so that it snaps into the jack. The paddle's PC board must be resting on the two plastic nubs to the left and right of the jack.

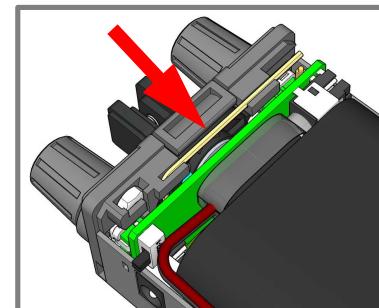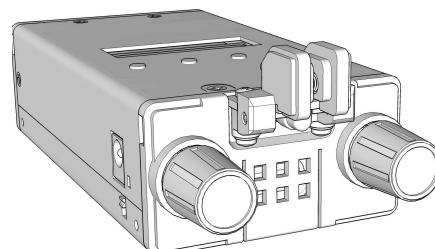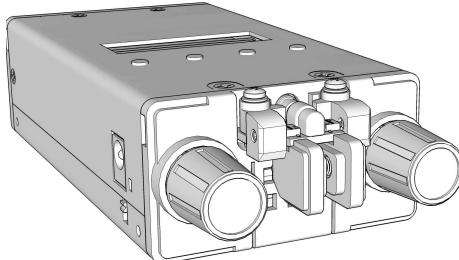

Contact spacing of the KHPD1 paddle can be adjusted using the hex wrench stored inside the enclosure (see arrow in the illustration above-right). Each paddle has a set screw in its housing. A fairly wide spacing is recommended for operation in high-vibration or less-stable operating positions.

⚠ Turn the KH1 OFF when removing or replacing the hex wrench.

DATA CONNECTION

The KEY/DATA jack doubles as a serial interface port for upgrading firmware, via the supplied KXUSB cable and our *KH1 Utility* software application. (*MENU:KEY JACK* must be set to RS232; the KXUSB cable converts this to USB. The serial interface data rate is fixed at 9600 baud.)

The KH1's user interface can be fully remote-controlled through the KEY/DATA port, using a terminal emulator or custom software application. This capability is intended for factory alignment use, but it can also be used for special applications, such as SOTAmāt, in conjunction with a SOTACAT or similar hardware adapter. (Also see FT8 OPERATION, pg. 25. For a list of remote-control commands, refer to the *Elecraft KH1 Programmer's Reference*.)

- When the KEY/DATA jack is being used for remote control, it is not available for use with a keying device. However, there's a remote-control command (HK) that can be used to simulate CW keying, as if using a hand key. This command is used during factory alignment. It can also be used for on-air CW or FT8 transmission, emulating the key or paddle. The software application is responsible for ASCII to CW translation and/or could provide its own keying input device.

HEADPHONES AND SPEAKERS

The 3.5 mm PHONES jack accommodates headphones or an externally amplified speaker. A stereo plug must be used in all cases. If the log tray is installed on the same side as the headphone jack (which is the case for right-handed operators), a small-format, right-angle headphone plug will be needed to avoid interference with the log tray during operation.

Headphones are preferred when wind or other noise sources are present. However, the KH1 does include a small internal speaker, located on the bottom panel, between the two knobs.

- When using the speaker, strong signals or high sidetone volume settings can cause a significant increase in average receive current drain. If this occurs, you can reduce AF gain or sidetone level.

DISPLAY

The KH1 uses an alphanumeric LCD with two lines of 16 characters. The display is backlit at all times, consuming only 6 mA of current while making the display easily readable under any lighting conditions.

The KH1 FRONT PANEL QUICK REFERENCE (next page) shows the normal operating display. Subsequent sections show examples of all the different displays used.

With most switch functions, the LCD is divided into four columns that correspond to the four push-button switches below it. In such cases, the upper line of the LCD shows switch *tap* functions, while the lower line shows *hold* functions. (This is presented in detail on pg. 17.) Small white and yellow squares to the left of the display and switches serve as a reminder of this relationship.

KH1 FRONT PANEL REFERENCE

BNC jack is for most antennas (AX1/2/3, random wires, etc.). Both WHIP and BNC jacks are routed through ATU.

WHIP slide switch selects 20 m or 17-15 m. Set to OFF when using BNC.

WHIP post is used with 4' whip antenna. Loading coil is built-in.

LCD upper line shows VFO, mode, RIT/XIT, and tuning indicator

LCD lower line shows S-meter, atten icon, filter number, battery status, ATU icon, and UTC or local time


SPD-/+: WPM up/dn

RCVR: FL1-3, atten. 0/-10/-30 dB, RIT

PFn/XMTR: PF1-3, TUNE, power level, TX TEST, XIT

ON/OFF slide switch and internal charger LED

AF/MON knob *tap* sets AF gain and sidetone level/pitch; *hold* turns on SPOT tone

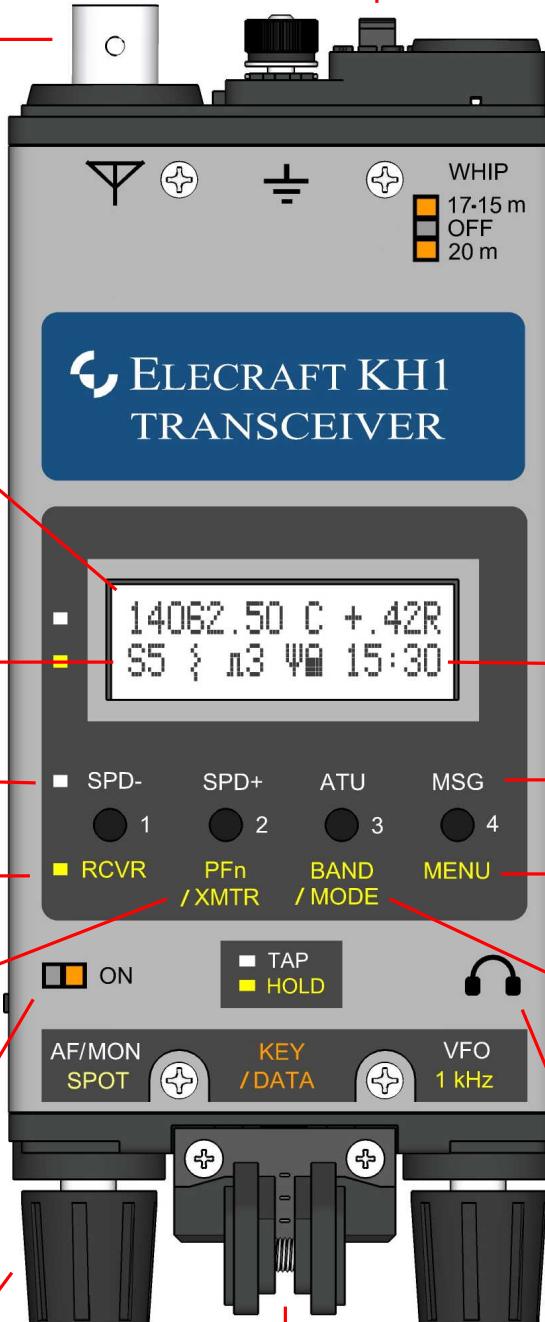

KEY/DATA jack is used with KHPD1 or other key; used as data port for F/W updates, remote ctrl.

All **pushbutton switches** and **knobs** have *tap* (white) and *hold* (yellow) functions. When sub-functions are shown on the LCD, *tap* to change those on the upper line; *hold* for lower line.

Alternate LCD lower line (*MENU:DISP MODE*) shows: voltage, current, PA temp. Lower line also shows text decode (*MENU:TEXT DEC*).

ATU: ATU tune; **MSG:** 1-6

MENU: Used for setup and calibration functions

BAND/MODE: Band select (40-15 m and SWL), mode, and memories (V/M, V>M)

Plugging in phones turns off internal speaker

VFO knob *tap* selects 10/100 Hz tuning rate; *Hold* selects 1 kHz rate

BASIC OPERATION

This section describes basic KH1 operation in tutorial fashion. We recommend trying each of the controls (summarized on pg. 15).

i Before using the KH1, connect a power supply and antenna, at minimum. See pages 5 and 9.

TURNING THE KH1 ON/OFF

To turn the KH1 on or off, use the small slide switch near the external supply jack on the left side. When you turn it on, the initialization screen should appear for about 2 seconds:

ELECRAFT
KH1

followed by the normal operating display. Line 1 shows VFO frequency, mode letter, and RIT/XIT offset. Line 2 shows the S-meter level, filter bandwidth, battery charge status icon, and time.

14000.00 C +.00
S0 □1 00:00

If there's an error message, refer to ERROR MESSAGES (pg. 37).

SWITCH TAP AND HOLD FUNCTIONS

All KH1 switches have two functions:

- *Tap* to activate the function labeled above a switch, in white. Tap functions are denoted with a white box, e.g. **SPD-**.
- *Hold* for over 0.5 seconds to activate the function labeled below a switch, in yellow. This is shown by a black box, e.g. **RCVR**.

The four pushbutton switches are also referred to as **1 - 4** (*taps*) or **1 - 4** (*holds*) when they're used to perform functions shown on the display.

VFO KNOB FUNCTIONS

The right-hand knob controls the VFO. *Tapping* this knob—i.e., briefly pushing it inward—alternates between 10 Hz and 100 Hz tuning steps. This is denoted as **⊗ VFO** (a knob icon, plus a white box indicating a *tap* function).

i The 100 Hz step size can be changed; see **MENU:VFO FAST**.

Holding the VFO knob in for over 0.5 seconds selects 1 kHz tuning steps (**⊗ 1 KHZ**) until the knob is tapped again to cancel.

i In **BAND/MODE**, the VFO knob moves the VFO in 100 kHz or 1 MHz steps (see pg. 17).

AF/MON KNOB FUNCTIONS

The left-hand knob (AF/MON) normally controls AF gain (**⊗ AF**). As you rotate the knob, the new setting is displayed briefly on line 1 of the display.

Tapping the AF/MON knob switches to its **⊗ MON** function (MONitor). Sidetone volume level is displayed on line 1 and sidetone pitch on line 2:

A⊗ MON 03
V⊗ PITCH 600 Hz

The A⊗ in line 1 indicates that the **AF** knob sets sidetone level. The V⊗ in line 2 indicates that the **VFO** knob sets sidetone pitch. Tap any control to restore the AF gain function.

⚠ You may need to re-align the BFOs if you change the sidetone pitch. See **MENU:ADJ BFO**.

Holding the AF/MON knob switches to the receiver spotting function, or (**⊗ SPOT**). This allows the VFO knob to be used to tune in a signal to match your sidetone pitch. **SPOT** will be shown on line 2 of the display until the spotting function is cancelled by any control tap.

DISPLAY MAPPING TO SWITCHES 1-4

Functions shown on the display are often mapped to one or more of the pushbutton switches. This provides access to up to 8 functions, each with a single switch press: 4 via a *tap*, and 4 via a *hold*.

In the example below, T1 - T4 correspond to taps **1** - **4**, and H1 - H4 correspond to holds **1** - **4**.

T 1	T 2	T 3	T 4
H 1	H 2	H 3	H 4

RECEIVER CONTROLS

After holding the **RCVR** switch, the LCD shows:

FL 1	FL 2	FL 3	[x]
0 dB	-10	-30	RIT

Tap **1**, **2**, or **3** to select filter bandwidths; tap **4** to exit without making changes. Hold **1**, **2**, or **3** selects attenuation levels; hold **4** to turn on RIT.

ATTENUATOR: When the attenuator is set to -10 dB, a resistor icon appears on line 2 (assuming *MENU:DISP MODE* is set to Operate):

14000.00	C	+ .00
S0	±1	00:00

The -30 dB setting uses a thicker resistor icon. In the 0 dB setting, the icon character is blank.

S-METER: The S-meter shows S0-S9 (6 dB/unit), then: "+" = S9+10, † = S9+20, ‡ = S9+30.

RIT: When RIT is on, an **R** appears to the right of the RIT/XIT offset on line 1. The VFO knob then controls the RIT offset. The offset can be zeroed using a menu function (see *MENU:RIT CLEAR*). RIT is used to change your receive frequency without affecting your transmit frequency – useful for fine-tuning stations after you call CQ.

PFn AND TRANSMITTER CONTROLS

Holding **PFn/XMTR** shows 8 selections:

PF 1	PF 2	PF 3	[x]
TUN	PWR	TST	XIT

Tap **1**, **2**, or **3** to execute a programmable function (see pg. 21). Tap **4** to exit.

Hold **1** to put the transmitter into TUNE mode. Hold **2** to select LO (~2 W) or HI (~5 W) power level (pg. 21). Hold **3** to put the transmitter into TX TEST mode, used for CW practice (no RF out).

XIT: Hold **4** to turn on XIT, which adds an **X** after the RIT/XIT offset. XIT offsets your transmit frequency only, useful when calling DX stations who send "UP 2" (etc.) when they call CQ.

Also see KEYING WEIGHT AND QSK DELAY (pg. 20).

BAND AND MODE CONTROLS

Holding **BAND/MODE** brings up this display:

[- 14 . 0 +]	V / M	[x]
[- CW +]	V > M	LOK

To change bands, tap **1** (-) or **2** (+). The last band, above 15 m, is the SWL band (pg. 22). The VFO knob adjusts frequency in 100 kHz steps. On the SWL band, *hold* the VFO knob in for 1 MHz steps.

To change modes, hold **1** (-) or **2** (+). Use SSB modes to copy AM (also see SSB/CW CROSS-MODE OPERATION, pg. 22). For FT8 OPERATION see pg. 25.

Tap **3** (V/M) to exchange the present VFO frequency (and mode) with the scratchpad Memory. Hold **3** (V>M) to copy VFO to memory.

Tapping **4** exits. Holding **4** locks (or unlocks) the VFO and XIT (but not RIT). VFO locking is useful when negotiating rough terrain.

KEYER SPEED CONTROLS

Tapping **SPD-** or **SPD+** changes the built-in keyer speed (8-50 WPM). This can be done while sending, including during message playback.

Slower code speeds (16-24 WPM) are recommended with QRP operation in general, and in particular when operating with small antennas and/or pedestrian mobile (/PM).

ATU TUNING

Tapping **ATU** causes the antenna tuner, if installed, to look for the best match to the attached load. You'll hear relays switching for 1 to 4 seconds. The ATU settings are recalled automatically when you change bands.

If SWR is very high (> 3:1) after matching with the ATU, consider making length or other adjustments to the antenna or counterpoise. Tap **ATU** again afterward. SWR is shown continuously on a bar graph as you key the transmitter. 1 solid block = close to 1:1, 2 blocks = 2:1, etc. Unfilled blocks indicate half of an SWR unit, so 1 solid and one unfilled would equate to about 1.5:1.

i The miniature ATU module in the KH1 has fewer L and C components than in the Elecraft KX2 and KX3 ATUs. This means it will not always find a very low SWR. In most cases it will be under 3.0, which still ensures excellent power transfer. The transmitter's PA device is very resilient to even higher SWR values, and it can be operated into virtually any load. However, if reflected power is excessive, the KH1 will automatically drop into Low Power mode. (See *MENU:ADJ PWR* for details on setting power levels.)

i The KH1 ATU does not need a "second-tap within five seconds" feature to try more L-C combinations. The ATU keeps trying until all combinations have been tested, or one is found that provides an SWR of 1:1.

MESSAGE PLAY / RECORD CONTROLS

There are six message memories in two groups (1-3, 4-6). Messages can be recorded using the keyer paddle, then played back with or without repeat. They can also be individually cleared.

i You can tap **SPD-** / **SPD+** during playback.

If text decode is turned on (*MENU:TEXT DEC*), message text will be decoded both as you enter it and as it is played back. If electronic logging is enabled (*MENU:LOGGING*), all transmitted text will be saved for later viewing or download.

All message operations start with a tap of **MSG**, which shows the following 8 functions:

M1	M2	M3	[x]
RP1	RP2	RP3	REC

As shown above, tapping **1 – 3** plays messages **M1 – M3**. Holding **1 – 3** plays with auto-repeat. *MENU:MSG RPT* sets the message repeat interval. In between repeated messages, a letter **r** flashes slowly to the right of the mode letter (**C**).

Holding **4** (**REC**) brings up the RECord functions:

M1	M2	M3	[x]
CL1	CL2	CL3	GRP

To record message **M1 – M3**, tap **1 – 3**. This will show "RECORDING MSG n" on the LCD, at which point you can start sending with the keyer paddle. Up to 40 characters can be entered. End recording by tapping any switch.

Holding **4** (**GRP**) alternates between the two message groups (1-3 and 4-6).

M4	M5	M6	[x]
CL4	CL5	CL6	GRP

To clear a message, hold **1 – 3** (e.g., **CL4 – CL6**).

USING THE MENU

To enter the menu, hold the **MENU** switch. This brings up the default menu entry, *DISP MODE*:

A⊗ **DISP MODE** [x]
V⊗ **Operate** [-CW]

The AF/MON knob is used to scroll through menu entries (shown by A⊗ at the start of line 1). The VFO knob is used to change parameter values (V⊗). To exit, tap **4** as indicated by [x] on line 1.

The *DISP MODE* menu entry selects the mode for line 2 of the LCD during normal operation. The default mode is **Operate**, showing S-units, filter bandwidth, icons, and time. The alternate mode for line 2 is **V/I/Temp**, which shows the supply voltage, current drain, and PA temperature (°C).

i The *DISP MODE* menu entry also provides a short-cut method of turning on the KH1's audio CW interface (**[+/- CW]**). See details below.

i All alignment menu entries start with "ADJ" (short for "adjust"). They're at the top of the list.

i **Some menu entries are locked to prevent accidental parameter changes.** This is indicated by a key symbol at the right end of the lower LCD row. To unlock, hold switch **4**.

AUDIO CW USER INTERFACE

The KH1 can optionally emit CW text for switch functions, band change, coarse VFO steps, and some menu entries. This aids blind operators, but others may also find it useful. Audio CW code speed is 10-30 WPM. A high tone pitch is used to differentiate the CW interface from TX sidetone.

i **Blind users will want to memorize the tap and hold sub-functions in the **MSG**, **RCVR**, **PFn / XMTR**, and **BAND/MODE** display groups** (pg. 17-18). If you do end up "hunting" for a sub-function, listen to the audio CW text sent; this will tell you what setting was changed.

Audio CW can be enabled in one of two ways:

- Use *MENU:SW TONES* to set the speed.
- On power-up, enter the menu, which starts at the *DISP MODE* entry. Hold **MENU** again to turn audio CW on (sends "15 WPM"). Tap **4** to exit (sends "X"), or scroll to *SW TONES* to change speeds.

All **MSG**, **RCVR** and **PFn/XMTR** functions send a label in CW. Tapping **MSG** sends "MSG" and waits for a selection (**1-3**). Holding **RCVR** sends "RX". Filter selections send "Fn", and attenuator selections send "n DB". Holding **PFn/XMTR** sends "TX". TX sub-functions send their new value, e.g. "HI" or "LO" when **PWR** is used.

i Power and SWR are sent at the end of **TUN** and **ATU** tune, e.g. "5R0 W 2R0" (SWR 2:1).

⚠ Using most sub-functions causes a return to the operating display. When a functional group stays displayed, a *low-high* tone is emitted periodically. Tap the [x] switch (**4**) to exit; the group will auto-exit after 10 sec (*high-low* tone).

Holding BAND/MODE emits the kHz and 100s of Hz VFO digits. (On 14063.5, you'd hear "63R5".) If you just needed to check your frequency, exit by tapping **4**. On band or coarse frequency changes, the VFO's MHz and 100s of kHz digits will be sent. On the SWL band, "S" is appended.

i During normal operation, tapping the VFO knob sends "1T" / "1TT" (10/100 Hz tuning); holding it sends "1K" (1 kHz). A high-pitched "tic" is emitted at each 10 kHz VFO boundary.

Accessing the menu, you'll hear "MENU" and the menu entry's name. (Scrolling quickly truncates the names.) **Menu entries that support audio CW parameter adjustment include:** *ADJ BPF*, *ATU MODE*, *EE INIT*, *FIRMWARE*, *KEY IAMB*, *KEY JACK*, *KEY WGHT*, *LOGGING*, *MSG RPT*, *QSK DELAY*, *SERIAL NR*, *SW TONES*, and *VFO FAST*.

i **To hear a menu parameter value, rotate the VFO knob slightly, then select the desired value.**

ADVANCED FEATURES

KEYING WEIGHT AND QSK DELAY

CW keying weight defaults to a roughly 1:1 dot:space ratio, which corresponds to a value of 1.25 in the *KEY WGHT* menu entry. Some operators prefer lighter keying (lower values).

A QSK (or break-in) delay can be applied after you stop sending. This keeps the receiver muted longer, which may be preferred on a noisy band or with very slow code speeds. Use the *QSK DELAY* menu entry to select the desired value. If you use this feature frequently, consider assigning the *QSK DELAY* menu entry to one of the user-programmable functions (PFn).

SCAN/MINI-PAN

The KH1 includes a band-scanning function with visual display of signal level across the selected tuning range. This is especially useful for hands-free signal search when bands are quiet.

Scan/mini-pan setup:

- Make sure the threshold comparator menu entry is set to the ideal value. See instructions at *MENU:PAN THR*.
- Tune the VFO to approximately the middle of the range of interest. For example, if you were monitoring 20 meters for SOTA activators or other QRP stations, you might set the VFO to 14060 kHz.
- Set *MENU:PAN SPAN* to the desired total scan range (default: 10 kHz). Smaller spans will provide a faster scan rate and better frequency resolution.

Scan/mini-pan operation :

- Set *MENU:PAN MODE* to ON and exit the menu.
- The scan/mini-pan will appear. This captures the VFO, so normal tuning is disabled until you tap any switch. Audio will still be enabled during the scan, resulting in “blips” as signals go by.
- If a signal of interest shows up in the scanned range, either visually or audibly, you may wish to stop the scan and tune the signal in. **Note:** weak signals may be audible without showing a visual indication.
- If you use this feature frequently, consider assigning the *PAN MODE* menu entry to one of the user-programmable functions.

POWER-ON BANNER

Using the *KH1 Utility* software application, you can customize your KH1 by adding a name and/or call sign to be displayed briefly when the KH1 is turned on. Up to 16 characters can be displayed.

This feature is especially useful if multiple KH1 users are present for an event, since this (and the serial number menu entry) may be the only way to tell KH1s apart.

The power-on banner will be sent in CW if the audio CW interface is enabled (*MENU:SW TONES*).

USER-PROGRAMMABLE FUNCTIONS

Menu entries *PF1 FUNC*, *PF2 FUNC*, and *PF3 FUNC* can be used to assign menu entries to user-programmable functions PF1, PF2, and PF3. Once assigned to menu entries, these three functions can be accessed by first holding the **PFn/XMTR** switch, then tapping **1**, **2**, or **3**.

i When a PFn function is assigned, a 3-character version of the menu entry name replaces the original **PFn** label. This serves as a reminder of the menu entry. These 3-character shorthand labels are shown in the menu listing.

Example: Using PF1 as a DISP MODE short-cut

To set up PF1 to access *MENU:DISP MODE*:

- Hold **MENU**, then use the AF/MON knob to locate the *PF1 FUNC* menu entry.
- Use the VFO knob to change the *PF1 FUNC* parameter to DISP MODE.
- Exit the menu.

Having set up PF1, you can now use it as a short cut:

- Hold **PFn/XMTR**. Line 1 will now show 4 tap options: **DSP PF2 PF3 [x]**. (Note that **DSP**, the 3-character shorthand name for DISP MODE, has replaced **PF1**.)
- Tap **1** to switch display modes. This restores the normal display, except line 2 of the LCD will now show V/I/Temp info.

i Using a PFn function that's assigned to a "binary" (2-valued) menu parameter selects the alternate value, then restores the normal display. For menu entries with more than two values, a PFn function will enter and remain in the menu.

REAL-TIME CLOCK

The real-time clock is useful for logging, whether on paper or using the KH1's built-in logging function (*MENU:LOGGING*), which automatically time- and date-stamps transmitted text.

Time is shown as HH:MM on line 2, if *MENU:DISP MODE* is set to Operate.

To view or set the time (HH:MM:SS), use *MENU:ADJ TIME*. To view or set the date, use *MENU:ADJ DATE*. Long-term RTC error correction is possible using *MENU:ADJ RTC*.

CUSTOMIZING POWER LEVELS

The factory-set levels for LO and HI power are about 2 W and 5 W, respectively. These can be changed using *MENU:ADJ PWR*.

i The KH1 does not use ALC (automatic transmit level control). Actual power output will vary with load SWR and supply voltage.

The recommended HI power level is 5 W into 50 ohms when running from an 11.0 V supply or battery pack. Higher levels may be possible on some bands, but this may compromise the CW keying envelope or increase PA device heating.

The recommended LO power level is 2 W minimum. Below this level, SWR readings may be artificially low.

i ATU tunes use an average of the LO and HI power settings, i.e. approximately 3.5 W if LO = 2.0 W and HI = 5.0 W.

⚠ If any transmit measurement is excessive, including current, reflected power, or temperature, the KH1 will automatically drop to the low power level. If this does not decrease the readings sufficiently, transmit will be exited.

TEXT DECODE AND DISPLAY

When text decode is enabled for either transmit or receive, it is displayed on line 2 of the LCD as it comes in. After a period of inactivity, the regular line 2 display will be restored.

Transmit Text Decode

The KH1 can decode and display your transmitted keying, assuming you're using the built-in keyer. To enable this, set *MENU:TEXT DEC* to any setting other than OFF. Use The TX-ONLY setting if you don't need to decode received CW.

i If automatic logging is turned on, but TEXT DEC is set to OFF, the TEXT DEC setting is internally treated as TX-ONLY. This is necessary to decode and log your transmitted text.

Receive Text Decode

Moderate to strong received CW signals can be decoded and displayed. In this case set *MENU:TEXT DEC* to TX & RX.

i A tuning indicator appears to the right of the mode letter: [^] if a signal is present; _ if no signal.

Decoding performance will vary with signal strength, interference, and signal-to-noise level. For best results use the narrowest filter (FL1).

CW/SSB CROSS-MODE OPERATION

If you set the KH1's operating mode to LSB or USB, you can copy SSB signals, but transmit will still occur as CW. This is referred to as "cross-mode" operation. Cross-mode is used by QRP stations to log into nets, or to make contacts on HF Pack calling frequencies, particularly 18157.5 kHz. It could also be used in an emergency.

When operating cross-mode, SSB listeners will hear your CW signal as a tone at your selected sidetone pitch.

GENERAL COVERAGE RECEIVE

Thanks to its electronically tuned RF band-pass filter, the KH1 provides general coverage from 6.7 to 22.0 MHz via a separate SWL band. This band can be selected using **BAND/MODE**. It's just above 15 meters in the rotation. While in **BAND/MODE**, the VFO tunes in 100 kHz or 1 MHz steps. Select by *holding* the VFO knob.

i SWL is an abbreviation for Shortwave Listening, e.g. to foreign broadcast stations.

All KH1 operating modes are available for SWL receive. To copy AM, use LSB or USB. Sometimes interference from an adjacent AM signal can be reduced by switching to the other sideband.

RIT and XIT are disabled on the SWL band. Instead, the RIT/XIT offset value is replaced with **SWL** as a reminder.

Improving General-Coverage Sensitivity

During factory calibration, the RF bandpass filter (BPF) is optimized only on ham bands. SWL values are set to approximate defaults.

You can manually optimize general-coverage sensitivity. To do this: (1) Connect an antenna (a long random wire is ideal). (2) Select the SWL band. (3) Tune the VFO to the middle of a 100 kHz segment of interest. (4) Use *MENU:ADJ BPF* to peak the received signal or noise.

Although transmit and automatic antenna tuning are not allowed when using the SWL band, you can optionally peak up received signals with the ATU using *MENU:ATU PARAM*. (This is discussed further at *MANUALLY TUNING THE ATU*, pg. 23.)

If you're using a wire that's $\frac{1}{4}$ wavelength or longer on the target frequency, receive sensitivity will generally be adequate without peaking the ATU. In this case you can simply bypass the ATU using *MENU:ATU MODE*.

MANUALLY TUNING THE ATU

You can directly view and change the automatic antenna tuner's settings using the **ATU PARAM** menu entry. L and C values are shown, and each can be independently moved up or down using the VFO knob. The impedance-selection setting (Z) can also be viewed/changed.

This feature is useful for peaking receive signals without transmitting. When operating in ham bands, it's much faster to let the ATU do the work by tapping the **ATU** switch. But transmit is not allowed when using the SWL band, so manual adjustment of the ATU is the only option.

Typically the C (capacitance) value would be set to 0 and the inductance varied until a peak is found. Then, if further optimization of signal strength is desired, some capacitance is inserted. When capacitance is non-zero, both the LO and HI impedance settings (Z) should be tried.

For further details see **MENU:ATU PARAM**.

AMPERE-HOUR METERING

The KH1's Ah reading is shown as part of the **VBAT** menu display. This is useful for testing battery packs, estimating remaining battery charge, or tracking the Ah needed to complete one or more objectives (e.g., a certain number of QSOs at a given power level). The value is preserved on power-off, so it can show amp hours used over multiple operating sessions.

Holding [0] resets the value to 0.000. This is typically done after swapping in a fresh battery.

BUILT-IN LOGGING

The KH1 can log your transmitted CW in EEPROM as a backup or as an alternative to paper logging. Up to 50,000 characters can be captured, along with time, date, band, and mode, so you can update a paper or electronic logbook later on.

To enable logging, set **MENU:LOGGING** to ON. A letter 'L' will slowly flash to the right of the mode letter (VFO line 1). Logging applies only when using the internal keyer. To take advantage of time stamping, set the built-in clock's time and date (**MENU:ADJ TIME** and **MENU:ADJ DATE**).

Transmitted CW is logged in **UPPER CASE**. Non-transmit CW is logged in **lower case**. See **ENTERING TEXT NOTES USING CW**, below.

1 If you assign **MENU:LOGGING** to a PFn function it will alternate between the ON and VIEW settings. This is useful for reviewing QSOs.

For details on viewing, erasing, and downloading log data to a computer, refer to **MENU:LOGGING**.

ENTERING TEXT NOTES USING CW

It may be useful to enter non-transmitted text into the built-in log. For example, suppose you call a station by sending only your own call sign. Tapping **MSG** temporarily enters TX TEST mode so you can enter the other station's call sign into the log using the keyer paddle. You can also enter field notes about locations, etc. This text appears in the log as lower case (i.e., non-transmitted).

INITIALIZING PARAMETERS (EEINIT)

The KH1 has 1 Kbyte of EEPROM (non-volatile) memory dedicated to configuration storage. This includes calibration data, menu settings etc.

If configuration data is compromised, you can reset it to defaults using **MENU:EE INIT**.

⚠ The **EE INIT** menu entry can be used to reinitialize ALL of the KH1's stored parameters, or just the OPERATIONAL parameters. Refer to the menu entry for detailed instructions.

If a full **EE INIT** is done, factory calibration settings will be lost, making a full recalibration necessary. Try an OPERATIONAL **EE INIT** first.

UPDATING FIRMWARE

There are two reasons to update the KH1's firmware:

- the KH1 failed its power-up test of the microcontroller firmware, and is displaying **UTILITY?** on the LCD
- there's new firmware available with features or bug fixes of interest

To update firmware:

First, unplug the keyer paddle. Then run our *KH1 Utility* program, available on our KH1 web page.

If the KH1 is displaying **UTILITY?**, then it will already be configured to use the KXUSB cable, ready for *KH1 Utility* to be run. The utility will prompt you to begin the firmware download process.

If you're doing a normal firmware update, locate the *KEY JACK* menu entry and change the setting to RS232. Then run *KH1 Utility* and follow the instructions in its help function.

In both cases, the KH1 will show **LOADING** on line 1, and a progress bar on line 2 during firmware load.

FORCED DOWNLOAD

If you can't operate the KH1 because of a "hang" condition, try initiating a **forced firmware load**.

To do this, hold the **2** switch while turning the KH1 on. This should force it into the boot loader, where it will show **UTILITY?** You can then proceed as explained above.

CONFIGURATION LOAD/SAVE

KH1 Utility can be used to save and re-load your KH1's menu settings, per-band frequencies, ATU tuning parameters, etc. Refer to the help information within *KH1 Utility* for instructions.

REMOTE CONTROL

The KH1 supports full remote control of its user interface. This capability is primarily intended for updating firmware and for automated factory alignment. It can also be used to operate the radio using custom software, in applications ranging from controlling a KH1 in a backpack to using FT8 transmit for self-ID in the field (see FT8 OPERATION, pg. 25).

For further information on remote control, please refer to the *KH1 Programmer's Reference*.

COMPUTER INTERFACE

The KH1 is remote-controlled through its *KEY/DATA* jack using a KXUSB cable and a terminal emulator or software application. *MENU:KEY JACK* must be set to RS232. The serial interface baud rate is 9600 baud (fixed).

When the *KEY/DATA* jack is being used for remote control, it is not available for use with a keyer paddle or hand key. However, there's a host command (HK) that can be used to simulate CW keying, as if using a hand key. This is used during manual or factory alignment procedures, but it could be used for CW transmission, replacing the key or keyer paddle. The software application would be responsible for ASCII to CW translation and/or could provide a keying input device.

FT8 OPERATION

The KH1 supports FT8 transmit for special purposes as described below. Firmware rev. 1.27 (or later) includes the required “FO” host command that allows VFO tuning in 1-Hz steps.

FT8 TRANSMIT FOR SOTA SELF-ID

Many KH1 owners participate in SOTA (Summits On The Air) activity as “activators.” This involves hiking to peaks – some readily accessible, some very remote – to put them on the air. General information is available at:

<https://www.sota.org.uk/>

SOTA operation takes place near specified frequencies. For example, a large percentage of activations use 14060 kHz +/- 5 kHz in CW mode.

On arrival at a destination, an activator can simply get on the desired SOTA frequency and call CQ (typically in CW or SSB modes). However, time on a peak is often limited by weather, or on-air conditions may be poor. In this case an activator may wish to let “chasers” know when they’ve arrived using other communication modes.

While this can be done by placing a cell phone call to let someone spread the word, cell service may not be available. An alternative is to broadcast an “I’m here” message using FT8, a high-sensitivity mode that can get short transmissions through to a wide range of monitoring stations even when other modes cannot.

To transmit an ID message using FT8 you’ll need a small, third-party device such as a SOTACAT, which can be temporarily plugged into the key jack. You’ll also need to create FT8 ID packet(s) using an application called SOTAmāt. Both the SOTACAT device and SOTAmāt app are discussed in detail here:

<https://sotamat.com/sotacat/>

For SOTA self-ID purposes, refer to instructions provided by SOTACAT and SOTAmāt.

TWO-WAY FT8 CONTACTS

Two-way FT8 QSOs are possible using the KH1 in conjunction with a suitable PC or smart phone application. At time of this writing, such applications are still in progress.

(Note: If you’re interested in creating your own FT8 implementation, refer to the FT8 section of the KH1 Programmer’s Reference.)

Two-way FT8 operation involves the following steps:

- Set up the phone or PC application
- Turn on the KH1 and set power to LO (about 2 W) to allow the power amplifier stage to run cooler
- Adjust the KH1’s VFO to the middle of the target band’s FT8 segment (e.g., 14074 kHz).
- Select the widest RX filter (FL3)
- Set MENU:KEY JACK to RS232
- Plug in a SOTACAT or similar device to the RS232 jack
- Couple the KH1’s audio output (speaker or phones) to the PC or phone (since that device will be doing FT8 decode)
- Follow instructions provided by the FT8 application

The KH1’s receiver is capable of copying both upper and lower sideband. However, the crystal filter was designed primarily for CW use, and the widest setting (FL3) has a 6 dB bandwidth of only about 2 to 2.5. This is smaller than the full 4 kHz FT8 band segment.

For this reason, rather than call CQ and potentially be called by stations outside the range the radio can hear, try answering stations that are being decoded by your phone or PC app.

CONFIGURATION

Numerous menu entries are provided to personalize your KH1. These are set to typical default values at the factory.

The menu entries most often modified by KH1 users are listed below. If you change a value frequently, consider assigning the associated menu entry to a programmable function switch.

Many menu entries are fully supported for audio CW feedback (pg. 19).

ADJ BPF	Peak RX BPF in each 100 kHz band segment used
ADJ TIME	Clock time (used for logging)
ADJ DATE	Calendar date (used for logging)
ADJ RTC	Optional RTC accuracy adjustment
ADJ PWR	Per-band hi/low power levels
ATU MODE	ATU bypass/auto
DISP MODE	Operate or V/I/Temp for LCD line 2 (also used as shortcut to turn on audio CW user interface; pg. 19)
KEY IAMB	Iambic keying mode
KEY JACK	Paddle normal/reverse/hand key (or RS232 for firmware updates)
LOGGING	Automatic logging on/off/viewing
MSG RPT	Message repeat interval
PAN MODE	Scan/mini-pan feature (pg. 20)
PFn FUNC	User-programmable functions
QSK DELAY	Variable QSK delay
RIT CLEAR	RIT/XIT offset clear; can only be used with a PFn function
TEXT DEC	TX and RX text decode control
VBAT	Battery voltage, Ah measurement
VFO FAST	Sets faster of two normal VFO tuning rates (100 Hz, 200 Hz, etc.)

ALIGNMENT

Alignment of the KH1's transmitter and receiver is done by the factory. If you have suitable test equipment and want to touch up any of the parameters on your own, be sure to perform the alignment steps in the order listed below.

RECEIVER

- Calibrate the synthesizer reference frequency (*MENU:ADJ REF*).
- Optimize BFO frequency for filter FL2 for best sensitivity (*MENU:ADJ BFO*).
- Set the onset of AGC action at the mixer (*MENU:ADJ AGC*).
- Maximize receive sensitivity (*MENU:ADJ BPF*) at 7.05, 7.15, 7.25, 10.0, 14.0, 18.0, and 21.0 MHz. Then duplicate the 10.0 setting at 10.1; duplicate the 14.0 setting at 14.1/.2/.3; duplicate the 18.0 setting at 18.1; duplicate the 21.0 setting at 21.1/.2/.3/.4. NOTE: BPF alignment of the general coverage (SWL) band is optional, and can be done at specific 100 kHz segments of interest.
- Calibrate the S-meter (*MENU:ADJ SMTR*).

TRANSMITTER

1 The first two steps below require that the front panel be removed.

- Set PA bias current (*MENU:ADJ BIAS*).
- Null the SWR bridge trimmer capacitor (*MENU:ADJ SWR*).
- Calibrate the watt meter (*MENU:ADJ WMTR*).
- Calibrate the low- and high-power settings (*MENU:ADJ PWR*).

MENU FUNCTIONS

Menu entries are shown in alphanumeric order in the table below.

MANY MENU ENTRIES ARE LOCKED to prevent accidental parameter changes. This is indicated by a key symbol at the right end of the lower LCD row. To unlock, hold switch **4**.

Some menu entries fully support the optional audio-CW interface. See *MENU:SW TONES* and pg. 19.

Each entry has a regular name used in the menu, plus a 3-character shorthand name in braces, e.g. **{AGC}**. Shorthand names are displayed as IDs for user-programmable functions (see pg. 21). They're also used with the KH1's "MN" remote-control command, which opens the selected menu entry. Refer to the *Elecraft KH1 Programmer's Reference* for details.

MENU ENTRY & DEFAULT	DESCRIPTION
ADJ AGC V {AGC} 0	<p>Sets onset of AGC action by adjusting DC bias at the base of transistor Q10.</p> <p>To set the AGC voltage:</p> <ul style="list-style-type: none">• Unlock the ADJ AGC V menu entry.• With no signal at the antenna jack, adjust the parameter until the AGC DC voltage shown on line 2 (typically 1.3 to 1.4 V) drops by about .02 to .03 V. <p>NOTE: On power-up, AGC voltage may take 1 – 5 s to stabilize near 1.3~1.4 V.</p>
ADJ BFO {BFO} CW: 9213.80 LSB: 9213.80 USB: 9216.00	<p>Used to optimize BFO frequencies. IMPORTANT NOTE ON CW MODE: if the sidetone pitch is changed (from 500 Hz), we suggest re-aligning the BFO for both FL1 and FL2. This is <u>not</u> necessary for FL3, or for the filters used in SSB modes.</p> <p>NOTE: BFO adjustment <u>does not</u> affect actual receive frequency of the KH1, because the BFO is taken into account when the local oscillator frequency (LO) is calculated. This means that as the BFO is changed, the pitch of received signals does not change, so the BFO can easily be adjusted for best signal amplitude.</p> <p>To align the BFO frequencies:</p> <ul style="list-style-type: none">• Put the KH1 into TX TEST mode to prevent possible damage to the signal generator due to accidental transmit. Use XMTR -> TST.• Connect a signal generator to the KH1's BNC jack. Set the sig gen for any convenient test frequency, with amplitude of -90 dBm.• Select CW mode using the mode up/down functions (BAND -> [- MODE +]).• Select filter FL2 (RCVR -> FL2). This filter has ~500 Hz bandwidth and less passband ripple than FL1 or FL3, so it is the best choice for BFO adjustment.• Tune the VFO until the received signal pitch matches the sidetone pitch.• Unlock the ADJ BFO parameter. Adjust the CW BFO frequency for maximum signal strength (this can be done by ear or by watching the relative audio signal level shown on line 1 of the LCD). Note this value for subsequent steps.• Exit the menu and switch to LSB mode using the mode up/down buttons.• Re-enter the menu and set the LSB BFO frequency to that used for CW/FL1.• Exit the menu and switch to USB mode.

	<ul style="list-style-type: none"> Re-enter the menu and set the USB BFO frequency to that used for CW/FL1, + 2.0 kHz. (Further adjustment is subject to operator preference.)
ADJ BIAS {BIA}	<p>Used to set PA bias current. The top cover must be removed to access trimmer R9.</p> <p>To set the bias:</p> <ul style="list-style-type: none"> Remove the top cover. Set AF GAIN to minimum to ensure that RX current drain stabilizes at its no-signal level. (This is required because RX current is subtracted from total current in order to derive the TX bias value.) Locate a screwdriver compatible with R9. Set R9 fully counter-clockwise. Scroll to the ADJ BIAS menu entry and unlock the parameter. PA bias will be turned on. The text on line 1 of the LCD will remind the user to adjust R9 for a bias of ~0.20 A, while line 2 shows the actual PA bias current. Adjust the bias using R9. The acceptable range is 0.18 to 0.22 A. Tap switch 4 to exit, which turns PA bias OFF. <p>NOTE: It may be possible to use reduced PA bias to provide a slight improvement in efficiency. However, the PA stage is intended to be biased class AB to ensure adequate gain to reach 5 W on all bands, at low supply voltages.</p>
ADJ BPF {BPF} Value is stored per 100 kHz	<p>Tunes the RX band-pass filter (BPF) over 6.7 to 22 MHz, via a D-to-A converter. A DAC value is stored for every 100 kHz within this range, though in practice, bands from 15 MHz up can use the same DAC value to cover the entire ham band.</p> <p>NOTE: Receive band-pass filter values for the ham bands are set at the factory. If you use the SWL band (the next band above 15 m when using BAND/MODE), you'll need to peak the band-pass filter on each 100 kHz segment you use.</p> <p>To fine-tune the BPF voltage for a given 100 kHz band segment:</p> <ul style="list-style-type: none"> Unlock ADJ BPF. Adjust the parameter while listening to on-air noise or a weak signal (-100 dBm or lower), or use the signal strength method described below. NOTE: If the audio CW interface is enabled, the parameter value will only be sent after you stop adjusting for > 2 seconds; this allows you to hear band noise. Below 15 MHz the best value will be different for each 100 kHz band segment. Above 15 MHz the same value can be used for all 100 kHz segments. <p>Using the Audio Signal Strength Display:</p> <p>When the ADJ BPF menu entry is unlocked, line 1 of the LCD shows the relative audio signal level as a 5-digit number. For weak signals that don't activate AGC, this can be used for BPF alignment in lieu of peaking the signal by ear. It also provides a way to measure the MDS of the KH1's receiver, as follows.</p> <p>To measure receiver MDS:</p> <ul style="list-style-type: none"> Put the KH1 into TX TEST mode to prevent possible damage to the signal generator due to accidental transmit. Use XMTR -> TST. Bypass the ATU, if applicable, using MENU:ATU MODE. Select crystal filter 1 using RCVR -> FL1. (Note: MDS may vary slightly among the three filter bandwidths. FL1's bandwidth is ~300-500 Hz.) Connect a signal generator to the KH1's BNC jack. Set the sig gen for the desired test frequency, with amplitude of -107 dBm.

	<ul style="list-style-type: none"> Temporarily set <i>MENU:AGC V</i> to 30 to disable AGC on weak signals. Turn the sig gen ON. Adjust the parameter for peak as indicated by the audio signal measurement. Write down the value (typ.: 00500). Turn the sig gen OFF and note the lower number (typical: 80). MDS (in dBm) is equal to: $-107 - 20 \log(V_{AF_sig} / V_{AF_noise})$. Restore the <i>MENU:AGC V</i> parameter to its aligned value (typically 45-50).
ADJ DATE {DAT}	<p>Used to view/set the RTC's date registers. U.S. date format is used (MM/DD/YY). Set the date if logging will be used (<i>MENU:LOGGING</i>). Also see <i>MENU:ADJ TIME</i>.</p> <p>To set the date:</p> <ul style="list-style-type: none"> Unlock the <i>ADJ DATE</i> menu entry. Tap 1 to exit, 2 to set months, 3 to set days, or 4 to set years.
ADJ OSCID {OSC} 0	<p>Selects an MCU I/O address for the local oscillator IC. In most cases the default (ID = 0) will be used. If with this setting the VFO frequency cannot be tuned, or the synthesizer signal appears to be missing, try ID = 1, then ID = 2. (TECHNICAL NOTE: Parameter values 0/1/2 equate to I2C bus address 0x60/0x6F/0x62.)</p>
ADJ PWR {PWR} LO PWR, 0 HI PWR, 80	<p>Sets approximate power output on a per-band, per-power-level basis. Use XMTR -> PWR to alternate between the LO and HI levels. During factory alignment these are set to LO = about 2 W, HI = about 5 W. This is important, because the ATU uses the average of these two (about 3.5 W). Some bands may not quite reach 5 W due to component variances.</p> <p>NOTE 1: If you change the factory settings, use a supply voltage of about 11 volts, if possible, to match the voltage at which the battery stays over most of its charge. If you're using a freshly charged KXBT2 battery (over 12 V), you may want to wait until it gets to ~11 V (after about 10% discharge) before adjusting power.</p> <p>NOTE 2: Power output will also vary with load impedance. Use a dummy load when calibrating power levels.</p> <p>To adjust power output:</p> <ul style="list-style-type: none"> Connect a dummy load to the BNC jack and a paddle key to the key jack. Make sure <i>MENU:KEY JACK</i> is not set to RS232. Set the whip band switch on the top panel to the center-OFF position (if applicable). This disconnects the whip toroid from the ATU, reducing stray reactance, and eliminates any RF burn hazard from the whip mounting bolt. Set <i>MENU:ATU MODE</i> to Bypass, if applicable. Calibrate the wattmeter using <i>MENU:ADJ WMTR</i> if not already completed. Locate the <i>ADJ PWR</i> menu entry and unlock it. Press the hand key or paddle (firmware treats paddles as hand keys while in this menu entry). This will put the radio into TX mode. Adjust the parameter using the VFO knob until the desired power output is obtained.
ADJ REF {REF} -0.40 kHz	<p>Calibrates the synthesizer reference frequency. Once this is set on any band, all bands will be calibrated. This is factory-aligned to ~ +/- 20 Hz at 25 C.</p> <p>To calibrate the reference frequency:</p> <ul style="list-style-type: none"> Put the KH1 into TX TEST mode to prevent possible damage to the signal generator due to accidental transmit. Use XMTR -> TST.

	<ul style="list-style-type: none"> • Inject a signal at any convenient frequency (factory: 21.1 MHz). • Select CW mode and tune the VFO to that exact frequency. • Unlock <i>ADJ REF</i>. Set the parameter so that RX signal pitch matches sidetone. • You can use SPOT while in this menu entry to allow zero-beating. <p>NOTE: If the local oscillator appears to be missing or cannot be tuned, the synthesizer communications address may be incorrect. Refer to <i>MENU:OSC ID</i>.</p>
ADJ RTC {RTC} +00 s/day	<p>Can be used to improve accuracy of the built-in real-time clock.</p> <p>To adjust the RTC time-compensation value:</p> <ul style="list-style-type: none"> • Set the clock to a known time standard using <i>MENU:ADJ TIME</i>. • After 1 to 3 days, check the RTC's error in seconds using <i>ADJ TIME</i>. • Compensate by changing the <i>ADJ RTC</i> parameter by an equal but opposite amount, divided by days. Example: Clock set accurately on Monday at noon, then checked at noon on Wednesday (2 days); observed error of 8 seconds fast. To compensate, decrease the <i>ADJ RTC</i> setting by 4 seconds per day (8/2). • Set the clock accurately and repeat the test. <p>Also see <i>MENU:ADJ TIME</i> and <i>MENU:ADJ DATE</i>.</p>
ADJ SMTR {SMT} 100	<p>Used to set the S-meter's S9 level.</p> <p>To calibrate the S-meter:</p> <ul style="list-style-type: none"> • Put the KH1 into TX TEST mode to prevent possible damage to the signal generator due to accidental transmit. Use XMTR -> TST. • Bypass the ATU, if applicable, using <i>MENU:ATU MODE</i>. • Band-pass filter tuning (<i>MENU:ADJ BPF</i>) and AGC voltage (<i>MENU:ADJ AGC V</i>) must be aligned first. Do this now if applicable. • Select crystal filter 1 (RCVR -> FL1). (MDS may vary slightly among filters.) • Connect a signal generator to the KH1's BNC jack. Set the sig gen for the desired test frequency, at an amplitude of -73 dBm (S9), and turn it on. • Unlock the <i>ADJ SMTR</i> menu entry. Both the parameter value and the current S-meter reading are shown, e.g. "100 -> S9". • Adjust the parameter until the LCD shows S9.
ADJ SWR {SWR}	<p>Helps null the SWR bridge (for the ATU) using trimmer capacitor C80.</p> <p>To null the SWR bridge:</p> <ul style="list-style-type: none"> • Remove the KH1's top cover to provide access to C80. • Locate a non-metallic tuning tool suitable for adjusting C80. • Connect a dummy load to the BNC jack and a paddle or key to the key jack. • Make sure <i>MENU:KEY JACK</i> is not set to RS232. • Set the whip band switch on the top panel to the center-OFF position. This eliminates any RF burn hazard from the whip mounting bolt. • Set <i>MENU:ATU MODE</i> to Bypass, if applicable. • Unlock the <i>ADJ SWR</i> menu entry. Line 1 of the LCD will show "C80 -> Null" as a reminder. Line 2 shows bridge detector voltage (0000 when not transmitting). • Press the hand key or paddle to enter TX mode. Adjust C80 for best null. • Exit the menu.

ADJ TIME {TIM}	<p>Used to view/set the RTC's time registers. Time-keeping accuracy can be improved using <i>MENU:ADJ RTC</i>. (Also see <i>MENU:ADJ DATE</i>.)</p> <p>To set the time (24 hour format):</p> <ul style="list-style-type: none"> • Unlock the <i>ADJ TIME</i> menu entry. • Tap 2 to set hours, 3 to set minutes, 4 to exit.
ADJ WMTR {WMT} 100	<p>Calibrates the KH1's power reading against a known-accurate external watt meter.</p> <p>To calibrate the watt meter:</p> <ul style="list-style-type: none"> • Connect a known-accurate wattmeter and 50 ohm dummy load to the BNC jack and a keyer paddle or hand key to the KEY/DATA jack. • Make sure <i>MENU:KEY JACK</i> is not set to RS232. • Set the whip band switch on the top panel to the center-OFF position to eliminates any RF burn hazard from the whip mounting bolt. • Set <i>MENU:ATU MODE</i> to Bypass, if applicable. • Locate the <i>ADJ WMTR</i> menu entry and unlock it. • Press the hand key / paddle to enter transmit mode. • Adjust the parameter until the KH1 reading matches the external watt meter.
ATU MODE {ATM} Not Inst	<p>If an ATU is installed, set this parameter to Bypass or Auto. When set to Auto, an ATU icon will appear in line 2 of the operating display. If the parameter is set to anything besides Not Inst., the KH1 will test the ATU module on power-up.</p> <p>To use ATU MODE test settings:</p> <ul style="list-style-type: none"> • The K1 - K8 Test settings activate individual latching relays. Firmware treats paddles as hand keys while in these test modes so SWR can be easily checked. This is useful for verifying the L and C components on the ATU. • The GPO - GP7 Test settings also activate K1 - K8. But instead of returning to nominal voltage after activating a latching relay, they hold the associated driver output at 5 V. • The COM setting doesn't activate relays; it places 5 V on the common line.
ATU PARAM {ATP}	<p>This menu entry can be used to view and change the ATU's L, C, and Z (network high/low impedance) settings. It overrides the Bypass or Auto setting of the <i>ATU MODE</i> menu entry until the next time that setting is changed.</p> <p>The primary purpose for this feature is to manually peak up signals with the ATU's L-network when using the KH1's SWL band. Other uses include: (1) checking the ATU's tuning solution for a given load (L is shown in μH and C in pF); (2) peak up receive sensitivity on any band without transmitting; (3) manually try settings different from what the ATU arrived at. (In the latter case, note that the ATU tries 100% of network combinations and selects the one that produces the lowest SWR. Manual adjustment is not likely to produce better results.)</p> <p>To view or change ATU network values:</p> <ul style="list-style-type: none"> • Unlock the <i>ATU PARAM</i> menu entry. • Tap switch 1 to exit, 2 to view/set L, 3 to view/set C, and 4 to view/set [Z]. • If you make any changes, they will persist after menu exit.

	<ul style="list-style-type: none"> To return to normal ATU operation, use the <i>ATU MODE</i> menu entry to re-engage the desired mode. This is necessary even if the desired mode is already in effect. For example if mode is already Auto, go to Bypass, then back to Auto.
DISP MODE {DSP} Operate [-CW] (Audio CW interface OFF)	<p>Selects one of two display modes for line 2 of the LCD:</p> <ul style="list-style-type: none"> Operate mode shows the S-meter reading, along with icons for the attenuator and ATU (when applicable), battery status icon, and 24-hour time. V/I/Temp mode shows the supply voltage (internal battery or external supply, whichever is higher), current drain, and PA temperature (deg. C). These values are updated continuously in both RX and TX modes. <p>In addition, this menu entry provides a shortcut, eyes-free means to turn on the audio CW interface. On power-up, DISP MODE is the default menu entry. Holding MENU again will alternate between [-CW] and [+CW], the latter indicating that the audio CW interface is on (at 15 WPM). If a faster audio CW speed is desired, the user can then scroll to the <i>SW TONES</i> menu entry.</p> <p>Many operators assign the <i>DISP MODE</i> menu entry to a PFn function (for an example of how to do this, see <i>MENU:PF1 FUNC</i>).</p> <p>NOTE: The <i>VBAT</i> menu entry provides a more accurate indication of internal battery voltage, as well as amp-hours consumed. (See <i>MENU:VBAT</i> for details).</p>
EE INIT {EE}	<p>CAUTION: This menu entry can be used to reinitialize <u>ALL</u> of the KH1's stored parameters, or just the <u>OPERATIONAL</u> parameters.</p> <p>If a full EE INIT is done, factory calibration settings will be lost, so a full recalibration will be necessary. To avoid this, try an <u>OPERATIONAL</u> EE INIT first.</p> <p>Prior to doing an EE INIT of either type, you should save your full KH1 configuration use KH1 Utility. See <i>CONFIGURATION LOAD/SAVE</i> (pg. 24). Each KH1's initial factory configuration is also saved and can be sent to you on request.</p> <p>EE INIT procedure:</p> <ul style="list-style-type: none"> Unlock the <i>EE INIT</i> menu entry. <u>This is a safe operation</u> that does not start init. Set the parameter to OPERATIONAL or FULL. <u>This is also safe</u>, since EEPROM initialization does not take place until power is turned OFF and back ON. To cancel any pending init, set the parameter back to Disabled, then exit the menu. To proceed with EE INIT, turn the KH1 OFF; wait a few seconds; turn it back ON. When you see the message "INIT REQUIRED," tap any switch. The selected EEPROM parameter initialization type will then occur. If you unintentionally reset all parameters, contact Elecraft support.
FIRMWARE {F/W}	Shows the firmware revision, e.g. "1.27."
KEY IAMB {IAM} MODE A	Selects the Iambic keying mode (A or B). The default (mode A) is a little more forgiving for first-time operators. Mode B may be preferred by operators who learned to do "squeeze-keying" with a keyer having a similar mode. Both provide dot- and dash-memories, but with slightly different "element-insert" timing.

KEY JACK {PDL} Pdl Norm	Selects paddle normal (used by most right-handed operators), paddle reverse (used by most left-handed operators), hand key, or RS232 interface. The latter is used for firmware updates, via a KXUSB cable and <i>KH1 Utility</i> software application. NOTE: The RS232 port also enables full remote control of the KH1. The KEY jack is not available for keying in this case, though keying can be accomplished using a remote control command. Refer to the <i>KH1 Programmer's Reference</i> .
KEY WGHT {WGT} 1.25	Used to vary CW keying weight. The default setting provides roughly a 1:1 dot:space ratio, and is generally recommended.
LOGGING {LOG} OFF	When <i>LOGGING</i> is ON, the KH1 will record up to 50,000 bytes of CW text. Time/date/band/mode are also captured for use in extracting QSO data. (The logged mode corresponds to the receive mode setting; CW, LS [LSB], or US [USB]. The transmit mode is always CW.) The built-in keyer must be used to allow firmware to decode the user's transmitted CW. To configure and use CW text logging: <ul style="list-style-type: none"> To enable logging, set the parameter to ON. TX text decode will then be turned on. A letter 'L' will flash slowly beside the mode letter (unless RX text decode is also on). Alerts will appear as you get close to filling log space. If you enter TX TEST mode while logging is enabled, either by using XMT→TST or by tapping MSG, characters will be logged in lower case. This is useful for adding annotations, such as the call sign of a SOTA or DX station just worked <i>without</i> having transmitted their call. Make sure <i>MENU:ADJ DATE</i> and <i>MENU:ADJ TIME</i> have been set up. To erase all log data, set the parameter to ERASE, then exit the menu. To scroll through logged text, set the parameter to VIEW. The LCD will then show time/date stamps, band, and mode on line 1, and text on line 2. Use the VFO knob to scroll through text. Tap/hold the VFO knob to change scroll rate. To "dump" the log as text: (1) unplug the keyer paddle; (2) set <i>MENU:KEY JACK</i> to RS232; (3) connect the KH1 to a computer using the supplied KXUSB cable; (4) run <i>KH1 Utility</i> on the computer; (5) select the utility's Command Tester function; (6) set the KH1's <i>LOGGING</i> menu entry to "SEND TO PC" and exit the menu. After the text is uploaded, it can be processed manually, or copied/pasted to a third-party application that extracts QSO info (not provided by Elecraft).
MSG RPT {RPT} 5 sec	Sets the message repeat interval. To repeat a message, <i>hold</i> a message function (M1 – M3 or M4 – M6) rather than <i>tap</i> . A 5 - 6 sec. interval is about right for casual CQing. Shorter intervals may be needed during contests, and longer for periodic CW beacons. During the pause between repeated messages, a letter r appears to the right of the mode character (C).
PAN MODE {PAN} Off	Turns the scan/mini-pan function on or off. See pg. 20.

PAN SPAN {SPN} 10 kHz	Sets the total frequency range for the scan/mini-pan function. See pg. 20.
PAN THR {THR} -00	Sets the detection threshold for CW text decode and the scan/mini-pan function. To adjust the threshold for maximum sensitivity (recommended): <ul style="list-style-type: none"> Disconnect the antenna. Adjust the PAN THR parameter upward until “AFCMP” switches from 0 to 1. <p>NOTE: Any other setting will result in a higher threshold, which may be useful in high-QRM situations.</p>
PFn FUNC {PFn} PFn Unset	Configures the KH1’s user-programmable functions as shortcuts to any menu entry. Programmable function setup and use: <ul style="list-style-type: none"> Locate the menu entry for the target PFn function (e.g. <i>PF1 FUNC</i>). Rotate VFO A to select the desired menu entry (e.g. <i>ATU MODE</i>). This will change the function’s text to a 3-letter abbreviation that serves as a reminder of the assignment (in this case, <i>ATM</i>). Exit the menu. The target PFn function (in this case, PFn/XMTR -> ATM) will now jump to the specified menu entry (<i>ATU MODE</i>). If a menu entry is “binary” (2-valued), accessing it via a PFn function will change the value, display it, then return to normal display. In a few cases this applies to menu entries with more than two values. For example, if <i>ATU MODE</i> is set to <i>Bypass</i> or <i>Auto</i>, it will act like a 2-valued menu entry for PFn purposes. To clear a PFn assignment, set the PFn FUNC parameter to the value PFn Unset by scrolling the parameter to the name of the PFn FUNC entry itself.
QSK DELAY {QSK} 0.00 sec	Used to specify the delay time before the KH1 returns to receive mode. A longer delay may be helpful during noisy band conditions or when using slower code speeds.
RIT CLEAR {CLR}	This menu entry can only be used as a PFn assignment. That function, when accessed, will clear any RIT/XIT offset.
SERIAL NR {S/N}	This menu entry can be used to view, but not change, the serial number of this KH1. Note: The KH1 can optionally show a banner on power-up (name, call, etc.).
SW TONES {SWT} OFF	When this feature is turned on, the KH1 will emit audio CW text in response to tap/hold switch presses, as well as VFO frequency. To enable the CW audio UI, select a code speed. For further details see AUDIO CW USER INTERFACE, pg. 19.
TEXT DEC {TXT} OFF	When set to TX ONLY , the KH1 will decode outgoing CW sent with a keyer paddle plugged into the KEY/DATA jack. When set to TX & RX , the KH1 will decode incoming CW as well. Receive decode requires moderate to strong signals (S5 or higher). When this function is assigned to a PFn function, it alternates between OFF and TX & RX . For further details see pg. 22.

VBAT {VBT}	<p>This menu entry shows two useful measurements:</p> <ul style="list-style-type: none"> • LCD line 1: internal battery voltage (assuming a KHBC1 module is installed). • LCD line 2: approximate Ah of energy consumed since the AH parameter was last reset to 0. <p>To reset Ah to 0, hold the 4 switch ([0]). Also see pg. 23.</p> <p>NOTE: The voltage shown here is a more accurate reading of the internal battery than the “V/I/Temp” display (<i>MENU:DISP MODE</i>). For example, if the internal battery voltage is 12.0 V, it will read about 11.8 V using the V/I/Temp display, due to an internal supply/battery “wire-ORing” diode. But it will read 12.0 V in the VBAT menu entry, since this measurement occurs on the battery side of the diode. The VBAT voltage reading also remains accurate when an external power supply is plugged in for charging. For further details, see pg. 23.</p>
VFO FAST {FST} 100 Hz	<p>Specifies the VFO step size that's in effect when the frequency display shows only one decimal place. (When two decimal places are displayed, the tuning rate is 10 Hz; when none are displayed, the rate is 1 kHz.)</p> <p>Since the VFO knob has a small diameter, a VFO FAST setting of 200 Hz (or even higher) may be a pragmatic choice even for CW operation.</p>

TROUBLESHOOTING

GENERAL

- **UTILITY? shown on LCD:** Do a forced firmware load (pg. 24).
- **ERR (error) message displayed:** Refer to **ERROR MESSAGES** (pg. 37).
- **BAT LOW flashes:** Check the battery voltage (see *MENU:DISP MODE* and *MENU:VBAT*).
- **Can't turn power on:** Check power cable, or make sure a battery pack is plugged in and charged.
- **KXUSB cable keys TX:** *MENU:KEY JACK* must be set to RS232 when this cable is plugged in.
- **VFO frequency or other parameters not saved on power-down:** The KH1 only updates changed settings when a switch is pressed – not continuously, and not automatically on power-down.
- **General problem with transmit and/or receive:** Many problems can be caused by low power supply voltage or by a noisy or intermittent supply. Check your power supply's on/off switch, voltage, fuses (if applicable), and DC cabling. The KH1 provides voltage and current monitoring (see *MENU:DISP MODE*). Also see TRANSMIT and RECEIVE troubleshooting sections, below.
- **General problem with firmware behavior:** (1) Check all menu settings (see previous section). (2) Try loading the latest KH1 firmware. Review release notes.
- **Not Applicable message:** The function in use doesn't apply in the present context.
- **Not Implemented message:** The function you're trying to use has not yet been implemented.
- **Letter L flashes slowly near mode letter:** This is a reminder that logging is on (*MENU:LOGGING*).
- **Letter L (for logging) does not flash when expected:** When CW received text decode is enabled (*MENU:TEXT DEC*), its tuning indicator character overrides the flashing L for logging.
- **Letter r flashes slowly near mode letter:** Message repeat is in progress.
- **VFO frequency doesn't change:** The VFO may be locked. Use **BAND/MODE** → **4** to unlock.

TRANSMIT

- **Keyer paddle is reversed:** The first version of the KHPD1 paddle (with green PC board) was wired backwards from the newer version (with black PC board). Set *MENU:KEY JACK* as required.
- **Keyer paddle not secure:** If the paddle wobbles or adds extra elements when keying, it is probably not fully plugged into the KEY jack. Be sure to push it all the way into the jack until you feel a snap. Plastic nubs to the left and right of the jack should then preventing it from rotating.
- **Whip mounting post slightly loose:** This is normal. See explanation at top of pg. 10.
- **Can't transmit:** (1) Make sure the key or keyer paddle is plugged in. (2) Make sure *MENU:KEY JACK* is not set to RS232. (3) Turn off TX TEST mode if applicable (**PFn/XMTR -> TST**).
- **Low power output:** Check battery voltage. You may also be working into a high-SWR load and/or using a low supply voltage. The KH1 does not use ALC to maintain constant power output, so high SWR may result in reduced power. **Note:** Max power also varies per band.
- **BND END warning:** Indicates an attempt to transmit outside the ham bands.
- **HI CUR or HI SWR warning:** Check supply voltage. If voltage is low and/or a low-impedance antenna load is present, current can go up for a given requested power level. Reduce power if necessary. (The KH1 may do this automatically. If this doesn't reduce the current or reflected power to safe levels, the KH1 will drop out of transmit mode.)
- **HI TEMP warning:** PA heat sink temperature has exceeded the safe operating limit. Set display line 2 mode to V/I/Temp using *MENU:DISP MODE*. The normal display will then show power supply voltage, current drain, and PA temperature. Allow heat sink to cool. Reduce power if necessary. (The KH1 may reduce power, drop out of transmit mode, or turn itself off.)
- **Top cover is hot to the touch:** The top cover sheet metal provides part of the KH1's PA heat sinking, so it is normal for it to feel quite warm during long transmissions. The panel will run cooler if you use shorter transmissions, lower power, or a lower supply voltage.

RECEIVE

- **Internal speaker clipping / distortion:** The KH1's small internal speaker is not intended for use in high-noise environments, such as in a noisy vehicle or outdoors in high winds. If audible artifacts occur, reduce AF gain or switch to headphones (or use an external powered speaker).
- **No RX signal, or signal too low:** Check the following: (1) antenna connectors; (2) attenuator setting; (3) AF gain setting; (4) whip slide switch setting (may be in center-off position); (5) headphone plug; (6) *MENU:ADJ BPF* (may not be adjusted for this 100 kHz segment).
- **Audio noise drops briefly after large QSY:** The synthesizer IC used in the KH1 does internal recalibration after the VFO moves a certain distance (50-150 kHz). This brief transition may be perceived as a short audio dropout.
- **Opposite-sideband images heard:** Some received opposite-sideband (OSB) signal will always be heard on strong signals with a 4-crystal filter. The amount varies with filter bandwidth; suppression will be best with setting FL1. With strong signals, AGC reduces their audio level when tuned in, but not when tuned to the OSB image, reducing apparent OSB suppression.
- **Mobile installation noise:** If the 12 V DC accessory jack in a vehicle causes interference to the KH1's receiver: (1) improve vehicle's DC filtering; (2) use a battery; (3) relocate the antenna.
- **HI RFI warning:** The KH1 protects itself from high signal levels. First the -10 dB attenuator is inserted (if attenuation was set to 0 dB). The second step, if necessary, is to insert the -30 dB attenuator. Once signals return to a safe level for 5 seconds, the attenuator will be turned off.

ERROR MESSAGES

If you see an error message, try the steps provided in the table below, in order, to correct the problem. If the error persists, contact Elecraft support. **DO NOT ATTEMPT TO REPAIR SURFACE-MOUNT COMPONENTS** unless you have the required experience and proper equipment.

ERROR MESSAGE	DESCRIPTION	TROUBLESHOOTING STEPS
EE SAVE ERROR	During an internal MCU EEPROM save operation, an I2C bus operation failed.	Check the MCU IC for shorts, unsoldered pins, incorrect voltages, etc. Re-program the MCU, then do an EE INIT (see <i>MENU:EE INIT</i>). Replace the MCU.
ERR: ATU1	An ATU module is declared to be installed, but the module's MCP23008 I/O expander write/read test failed.	If there's no ATU module installed, set its menu entry to "Not Inst." Check for misalignment of the ATU module's 6-pin connector. Inspect the ATU PCB for shorts, unsoldered pins, etc. Do signal checks on the I2C bus between the main PCB and ATU PCB.
ERR: DAC	The 4-channel D/A converter failed a control register write/read test.	Inspect the DAC IC for shorts, unsoldered pins, etc. Do signal checks on the I2C lines between the main PCB and DAC. Also check voltages, etc. Replace the DAC IC.
ERR: EEPOT	The AGC threshold-setting EEPOT failed a write/read test.	Inspect the EEPOT IC for shorts, unsoldered pins, etc. Do signal checks on the I2C bus between the main PCB and EEPOT. Also check voltages, etc. Replace the EEPOT IC.
ERR: EXT EEPROM1	The external 32K EEPROM I2C write command failed.	Inspect the 32K EEPROM IC for shorts, unsoldered pins, etc. Do signal checks on the I2C bus between the main PCB and the EEPROM. Also check voltages, etc. Replace the 32K EEPROM IC.
ERR: EXT EEPROM2	The external 32K EEPROM read test returned the wrong values.	Inspect the 32K EEPROM IC for shorts, unsoldered pins, etc. Do signal checks on the I2C bus between the main PCB and the EEPROM. Also check voltages, etc. Replace the 32K EEPROM IC.
ERR: MCU EEPROM1	The PIC18's on-chip EEPROM failed a write/read test with value 0x55.	Reprogram the MCU. Check the MCU IC for shorts, unsoldered pins, etc. Replace the MCU.
ERR: MCU EEPROM2	The PIC18's on-chip EEPROM failed a write/read test with value 0xAA.	Reprogram the MCU. Check the MCU IC for shorts, unsoldered pins, etc. Replace the MCU.
ERR: PA TEMP	The LM20 PA temperature measurement IC's output voltage is out of the expected range.	Inspect the LM20 IC for shorts, unsoldered pins, etc. Do signal checks on the analog signal line between the main PCB and LM20. Replace the LM20 IC.
INIT REQUIRED	On-chip EEPROM is erased or has an incorrect format ID.	Tap any switch. An EEPROM parameter initialization will occur. Also see <i>MENU:EE INIT</i> .

Stuck Paddle?	Firmware has detected that a keying device has asserted either the dot or dash input to the KEY/DATA jack.	If a KHPD1 or other keyer paddle is plugged in, unplug it and turn power OFF, then ON to verify that this was the cause of the warning message. Check the attached KHPD1 or other keying device for shorts. Adjust contact spacing. (The hex wrench for the KHPD1 is stored inside the transceiver.) Turn power OFF, open the rear panel, and look for the hex wrench near the rear panel thumb latch. If applicable, unplug the KXUSB cable from the KEY/DATA jack. Make sure that <i>MENU:KEY JACK</i> is not set to "RS232".
Unplug KXUSB Cbl	The user did a firmware update using <i>KH1 Utility</i> , which requires that a KXUSB cable be plugged into the KEY/DATA jack. Firmware then recommends disconnecting this cable so the jack can be used as a key or paddle input.	Disconnect the KXUSB cable. Make sure that <i>MENU:KEY JACK</i> is not set to "RS232".
UTILITY?	Either the KH1 firmware checksum failed or a forced firmware load was requested by the user (by holding down switch 2 during power-on).	Connect a KXUSB cable to the KH1 and to a computer. Load firmware using <i>KH1 Utility</i> . This program will recognize that the KH1 is in its "boot loader" and will send new firmware. Also see UPDATING FIRMWARE , pg. 24.

THEORY OF OPERATION

Please refer to the block diagram on the next page.

Receiver

The KH1's receiver uses a low-current superhet architecture with a 9.215 MHz I.F. This frequency provides a good balance between crystal filter performance and image rejection. The mixer's noise figure is low enough to preclude the use of an RF preamp. A two-stage RF attenuator is provided for strong-signal situations.

Local oscillator signals for both the LO and BFO are synthesized by a specialized IC that generates signals in the GHz range, then divides them down to HF. This provides both fine resolution and low phase noise. High-side mixer injection (above the low-pass filter cutoff) is used on all five bands (40-15 m), again for the purpose of improving image rejection.

Audio-derived AGC is developed out of the AF preamp stage, then DC-amplified by a darlington transistor. The resulting voltage is applied to pin 1 of both the mixer and product detector, resulting in a very usable AGC range.

The class-AB final audio amp stage uses analog electronic gain control so it can be adjusted by the MCU. The gain control voltage is generated by a DAC (D-to-A converter) channel. The amp can drive the small speaker to about 0.5 W peak.

Transmitter

The same IC that generates receive LO and BFO also generates the TX carrier frequency during transmit. This is amplified by an NPN driver stage, then fed to a VHF MOSFET TO-220 package transistor biased class AB to ensure good gain and power output from 7 to 15 MHz.

Power output is controlled by driver bias. The driver's keying output wave shape is generated by a PNP high-side integrator to prevent key clicks.


Low-pass filter and ATU relays are latching to reduce total current drain.

Control circuits and signal processing

All transceiver control functions are controlled by a PIC18 microcontroller. The MCU also handles signal processing functions: (1) sidetone generation; (2) CW text decode; (3) spectral analysis to drive the mini-pan display; (4) audio signal detection and averaging, for the S-meter and other purposes.

TR switching is handled by a MOSFET switch.

Supplemental circuits include voltage, current and temperature monitoring; a 32 K EEPROM for decoded TX text logging; and a real-time clock IC (RTC).

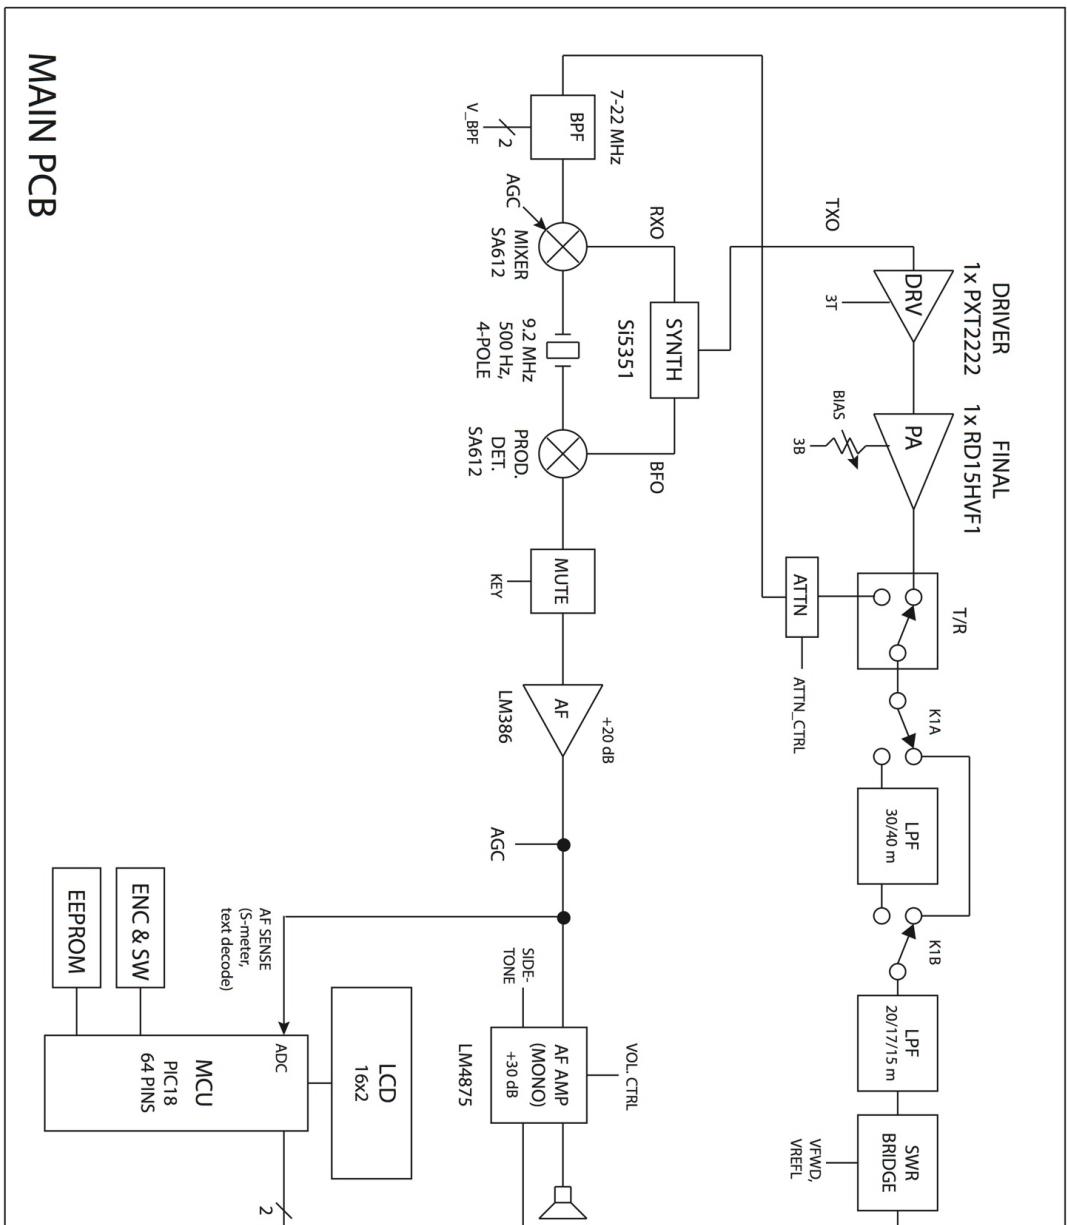

KH1 BLOCK DIAGRAM

Copyright 2024 by Elecraft, Inc.

W. Burdick, N6KR
Rev. A, Feb. 8, 2024

MAIN PCB

SPECIFICATIONS

NOTE: Specifications apply only within ham bands. All measurements taken with 11.0 VDC supply.

GENERAL

Frequency Range	Receive, amateur bands: 7.0-7.5 MHz, 10.0-10.5 MHz, 14.0-14.5 MHz, 18.0-18.5 MHz, and 21.0-21.5 MHz Receive, general coverage (SWL band): 6.7-22.0 MHz. (Note: Receive I.F. is 9.215 MHz. Reception near I.F. subject to lower image rejection.) Transmit: 40/30/20/17/15 meter amateur bands. Transmit excluded in some ranges (by country).
Frequency Stability	+/- 1 ppm typical at 25 C after 5-minute warm-up
Antenna Inputs	BNC jack: 50 ohms, nominal; signal is routed through ATU. Whip: 45" (114 cm.); matching network covers 20/17/15 m with ATU CW, and CW/SSB cross-mode (CW TX, SSB RX)
Modes	
Supply Voltage and Current	8 V min, 15 V max. .5 to 1.0 A typical in transmit; 40 – 80 mA typical in receive (no signal). Internal battery charging (KHIBC1), when active, adds ~250 mA. Charger plugged in but not charging: 3 mA (disconnect charger when not needed).
Size and Weight	Size of basic KH1, including knobs and connectors: 5.7" x 2.3" x 1.2" (14.5 x 5.8 x 3.0 cm). Weight: ~6 oz. (0.17 kg). With all options and battery: ~13 oz. (0.36 kg).

RECEIVER

Sensitivity (MDS)	-133 dBm (typ.) @14.0 MHz, 500 Hz bandwidth
S-Meter Calibration	6 dB per unit from S0-S9; 10 dB per unit above
Audio Output	Internal speaker, ~0.5 W peak
Receive Features	Scan/mini-pan; 3 crystal filter bandwidths (~0.3, 0.5, 2.0 kHz); RIT; filter center pitch tracks sidetone pitch; received CW decode/display.

TRANSMITTER

Output Power	~5 W max. (Note: Maximum available output power varies with power supply or battery voltage, as well as antenna load impedance.)
Transmit Features	Built-in keyer (8-50 WPM); full CW break-in (variable QSK); MOSFET T/R Switching; 6 CW messages; transmitted text decode/display; automatic logging of CW text, up to 50,000 characters (see <i> MENU:LOGGING</i>).
Spurious Emissions	> 50 dB below carrier typ. @ 5 W
CW Sidetone Pitch	500-800 Hz; receive filter center frequency tracks sidetone pitch

CUSTOMER SERVICE AND SUPPORT

TECHNICAL ASSISTANCE

Technical assistance is available to all of our customers. We encourage you to use e-mail for faster response to your questions. E-mail address is: support@elecraft.com. If you need replacement parts, send an e-mail to parts@elecraft.com. We typically respond to e-mail the same day from Monday through Friday. Telephone assistance is available from 9 A.M. to 5 P.M. Pacific time (weekdays only) at 831-763-4211. (For faster response, please use e-mail rather than call.)

REPAIR / ALIGNMENT SERVICE

If necessary, you may return your Elecraft product to us for repair, calibration or alignment. If you purchased your Elecraft product from one of our Authorized Distributors, please contact them first. They can perform all of the factory calibrations that can be made at the factory.

IMPORTANT:

- REMOVE BATTERY PACK before shipping (see instructions on pg. 6).
- You must contact Elecraft before mailing your product to obtain Return Authorization to begin the return process. When e-mailing, please provide your call sign, the product in question, and a description of what the problem is. We will reply with an e-mail that contains shipping instructions, and current information on repair fees and turn-around times. Our repair location may be different from our factory location. We will give you the address to ship your KH1 to at the time of repair authorization. Packages shipped to Watsonville, CA without authorization will incur an additional shipping charge for reshipment to the required repair depot.

Elecraft 1-Year Limited Warranty

This warranty is effective as of the date of first consumer purchase (or if shipped from the factory, the date the product is shipped to the customer). It covers both our kits and fully assembled products. For kits, before requesting warranty service, you should fully complete the assembly, carefully following all instructions in the manual.

Who is covered: This warranty covers the original owner of the Elecraft product as disclosed to Elecraft at the time of order. Elecraft products transferred by the purchaser to a third party, either by sale, gift, or other method, who is not disclosed to Elecraft at the time of original order, are not covered by this warranty. If the Elecraft product is being bought indirectly for a third party, the third party's name and address must be provided at time of order to ensure warranty coverage.

What is covered: During the first year after date of purchase, Elecraft will replace defective or missing parts free of charge (post-paid). We will also correct any malfunction to kits or assembled units caused by defective parts and materials. Purchaser pays inbound shipping to us for warranty repair; we pay shipping to return the repaired equipment to you by UPS ground service or equivalent to the continental USA and Canada. For Alaska, Hawaii, and other destinations outside the U.S. and Canada, actual return shipping cost is paid by the owner.

What is not covered: This warranty does not cover correction of kit assembly errors. It also does not cover misalignment; repair of damage caused by misuse, negligence, battery leakage or corrosion, or builder modifications; or any performance malfunctions involving non-Elecraft accessory equipment. The use of acid-core solder, water-soluble flux solder, or any corrosive or conductive flux or solvent will void this warranty in its entirety. Also not covered is reimbursement for loss of use, inconvenience, customer assembly or alignment time, or cost of unauthorized service.

Limitation of incidental or consequential damages: This warranty does not extend to non-Elecraft equipment or components used in conjunction with our products. Any such repair or replacement is the responsibility of the customer. Elecraft will not be liable for any special, indirect, incidental or consequential damages, including but not limited to any loss of business or profit